

- Mass air flow sensor and bracket assembly
- 2. Engine air outlet tube
- 3. Engine air cleaner intake tube and duct
- 4A. Screw
 - 5. Engine air cleaner

- 6. Battery tray
- 7B. Engine air cleaner tube clamp
 - 8. Throttle body
 - 9. Air cleaner outlet tube
- A. Tighten to 4 N.m (36 lb-in)
- B. Tighten to 1.4-2.5 N.m (12-22 lb-in)