 


FLUID LEVEL AT OPERATING TEMPERATURE
66°C-77°C (150°F-170°F)




"DO NOT DRIVE" MARK

AUTOMATIC TRANSAXLE DIPSTICK
ATF-XT-2-QDX
CHECK WITH ENGINE RUNNING.
TRANSAXLE IN "PARK"

BATTERY
BXT-65-650

AIR FILTER FA 1043
REPLACE ELEMENT
AT RECOMMENDED
INTERVAL

OIL FILTER FL300
COAT GASKET WITH
ENGINE OIL. REPLACE FILTER
AT RECOMMENDED
INTERVAL

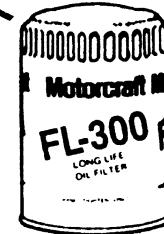


ENGINE COOLANT RESERVOIR
COOLANT 19549

WINDSHIELD WASHER RESERVOIR
WASHER FLUID 19550


BRAKE MASTER CYLINDER
BRAKE FLUID 19542

POWER STEERING PUMP DIPSTICK
POWER STEERING FLUID XT-1-QF
FLUID SHOULD BE IN THE FULL COLD OR FULL HOT RANGE DEPENDING ON TEMPERATURE

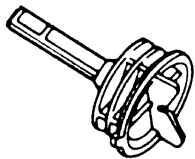

RADIATOR CAP

 ENGINE OIL LEVEL DIPSTICK



OIL LEVEL WILL NORMALLY BE IN THIS RANGE AFTER AN OIL CHANGE.
ENGINE OIL X0-10W30-GSP

BELTS
CHECK BELT WEAR INDICATOR AT RECOMMENDED INTERVAL. ENSURE THAT WEAR INDICATOR IS BETWEEN MINIMUM AND MAXIMUM MARKS