


**RADIATOR
COOLANT
RECOVERY
RESERVOIR**

**AUTOMATIC TRANSAXLE
OIL LEVEL INDICATOR**
CHECK WITH ENGINE RUNNING.
TRANSAXLE IN "PARK"
REFER TO SECTION 07-01.

DO NOT
DRIVE MARK

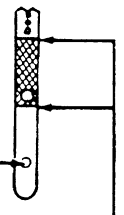


CHECK FLUID LEVEL AT OPERATING
TEMPERATURE ONLY 66° TO 77°C
(150° TO 170°F)

BRAKE MASTER CYLINDER

**AIR CLEANER
ELEMENT**
FA1043
REPLACE ELEMENT
AT RECOMMENDED
INTERVAL

BATTERY
BX-58C
BXT-65-650
(OPTIONAL)
BXT65-850 (OPTIONAL)

OIL FILLER CAP

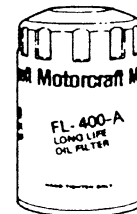

OIL FILTER
FL400A
COAT GASKET WITH
ENGINE OIL. REPLACE
FILTER AT RECOMMENDED
INTERVAL

**ENGINE
OIL LEVEL
INDICATOR**


DO NOT ADD
OIL BEYOND THE
F IN "FULL"

KEEP THE OIL
IN THIS RANGE



OIL LEVEL WILL NORMALLY BE IN
THIS RANGE AFTER AN OIL CHANGE.

**WINDSHIELD
WASHER RESERVOIR**

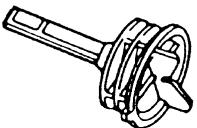

**POWER STEERING
PUMP DIPSTICK**
FLUID SHOULD BE
IN THE FULL COLD
OR FULL HOT RANGE
DEPENDING ON
TEMPERATURE

