 


AUTOMATIC TRANSAXLE OIL LEVEL INDICATOR
CHECK WITH ENGINE RUNNING.
TRANSAXLE IN "PARK"
REFER TO SECTION 07-01.

DO NOT DRIVE MARK




CHECK FLUID LEVEL AT OPERATING TEMPERATURE ONLY 66° TO 77°C (150° TO 170°F)


BRAKE MASTER CYLINDER

AIR CLEANER ELEMENT FA1043
REPLACE ELEMENT AT RECOMMENDED INTERVAL

WINDSHIELD WASHER RESERVOIR

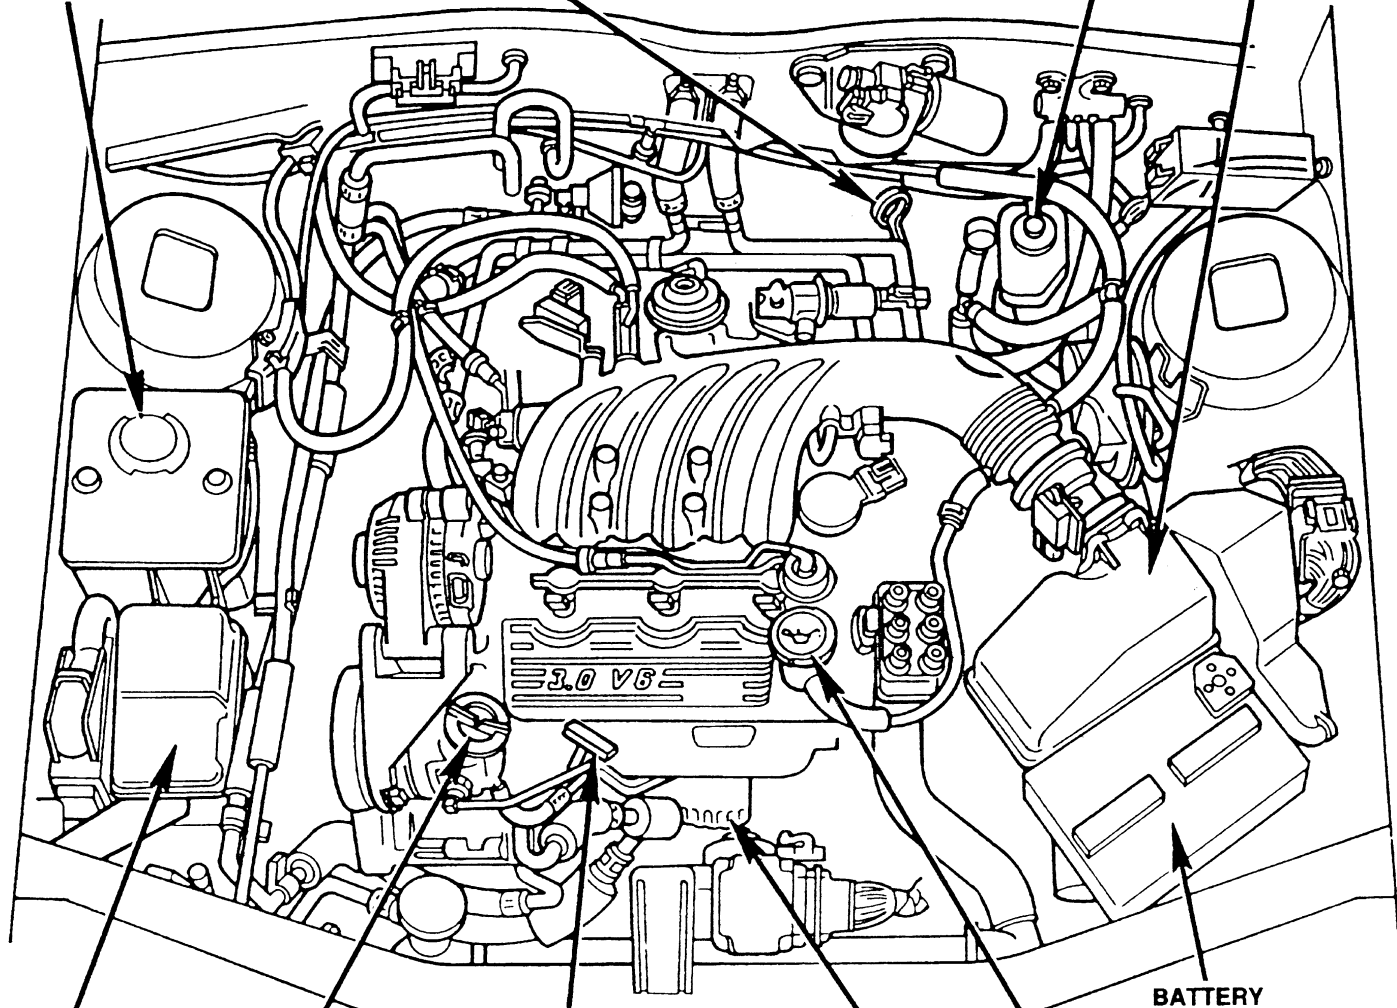

RADIATOR COOLANT RECOVERY RESERVOIR

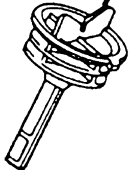

POWER STEERING PUMP DIPSTICK
FLUID SHOULD BE IN THE FULL COLD OR FULL HOT RANGE DEPENDING ON TEMPERATURE

ENGINE OIL LEVEL INDICATOR

KEEP THE OIL IN THIS RANGE

DO NOT ADD OIL BEYOND THE F IN "FULL"



OIL LEVEL WILL NORMALLY BE IN THIS RANGE AFTER AN OIL CHANGE

OIL FILLER CAP

OIL FILTER FL400A
COAT GASKET WITH ENGINE OIL. REPLACE FILTER AT RECOMMENDED INTERVAL

BATTERY BX-58C
BXT-65-650 (OPTIONAL)
BXT65-850 (OPTIONAL)

