

Follow Maintenance Schedule A if your driving habits MAINLY include one or more of the following conditions:

1. Short trips of less than 10 miles, when outside temperatures remain below freezing.
2. Operating the vehicle during hot weather in stop-and-go "rush hour" traffic.
3. Towing a trailer or using a car-top carrier
4. Operating in severe dust conditions
5. Extensive idling, such as police, taxi or door-to-door delivery service.

MAINTENANCE INTERVAL SCHEDULE A

Item No.	To Be Serviced	Minimum Time Interval	The services shown in this schedule up to 60,000 miles are to be performed after 60,000 miles at the same intervals																			
			3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60

EMISSION CONTROL SERVICE

1	Replace engine oil & filter	Every 3 months	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
2	Spark plugs - 2.5L, 3.0L, 3.8L											■										■
3	Spark plugs - 3.0L SHO, 3.2L SHO																					■
4	Inspect accessory drive belt(s)											■										■
5	Replace air cleaner filter (1)											■										■
6	Replace PCV valve											■										■
7	Replace cam belt - 3.0/3.2L SHO only																					■
8	Adjust valve lash - 3.0/3.2L SHO only																					■
9	Replace engine coolant	Every 36 months										■										■
10	Check coolant protection, hoses, & clamps	Every 12 months				■						■					■					■

GENERAL MAINTENANCE

11	Inspect exhaust shields											■										■
12	Change A/T fluid (2.5L, 3.0L, 3.8L) (3)											■										■
13	Inspect disc brake pads & rotors (2)											■										■
14	Inspect brake lining & drums (2)											■										■
15	Inspect battery fluid level (SHO only) (2)									■								■				
16	Inspect & repack rear wheel bearings											■										■
17	Rotate tires		■						■				■						■			
18	Check supercharger fluid level (SHO only)											■										■

(1) If operating in severe dust conditions, more frequent intervals may be required. Consult your dealer.
 (2) If your driving includes continuous stop-and-go driving or driving in mountainous areas, more frequent intervals may be required.
 (3) Change the automatic transaxle fluid if your driving habits frequently include one or more of the following conditions: Operation during hot weather (above 90 degrees F, 32 degrees C), carrying heavy loads and in hilly terrain. Towing a trailer or using a car-to carrier. Police, taxi or door-to-door delivery service.