

Follow Maintenance Schedule B if, generally, you drive your vehicle on a daily basis for more than 10 miles and NONE of the conditions for Schedule A apply.

1994-95 MAINTENANCE INTERVAL SCHEDULE B

Item No	To Be Serviced	Minimum Time Interval	The services shown in this schedule up to 60,000 miles are to be performed after 60,000 miles at the same intervals												
			5	10	15	20	25	30	35	40	45	50	55	60	
			EMISSION CONTROL SERVICE												
1	Change engine oil and replace filter	Every 3 months	■	■	■	■	■	■	■	■	■	■	■	■	■
2	Spark plugs - 2.5L, 3.0L, 3.8L								■						■
3	Spark plugs - 3.0L SHO, 3.2L SHO														■
4	Inspect accessory drive belt(s)								■						■
5	Replace air cleaner filter (1)								■						■
6	Replace PCV valve														■
7	Replace cam belt - 3.0/3.2L SHO only														■
8	Adjust valve lash - 3.0/3.2L SHO only														■
9	Replace engine coolant (4)	Every 36 months												■	
10	Check coolant protection, hoses, & clamps	Every 12 months			■					■			■		■
GENERAL MAINTENANCE															
11	Inspect exhaust shields									■					■
12	Change A/T fluid (2.5L, 3.0L, 3.8L) (3)									■					■
13	Inspect disc brake pads & rotors (2)									■					■
14	Inspect brake lining & drums (2)									■					■
15	Inspect battery fluid level (SHO only) (2)	Every 24 months						■						■	
16	Inspect & repack rear wheel bearings									■					■
17	Rotate tires & adjust air pressure		■		■			■		■		■		■	
18	Check supercharger fluid level (SHO only)									■					■

(1) If operating in severe dust conditions, more frequent intervals may be required. Consult your dealer.
 (2) If your driving includes continuous stop-and-go driving or driving in mountainous areas, more frequent intervals may be required.
 (3) Change automatic transaxle fluid if your driving habits frequently include one or more of the following conditions: Operation during hot weather (above 90 degrees F, 32 degrees C), carrying heavy loads and in hilly terrain. Towing a trailer or using a car-to-carrier. Police, taxi or door-to-door delivery service.
 (4) Change the engine coolant initially at 50,000 miles or 48 months. Thereafter, change the coolant every 30,000 miles or 36 months.