

- jet and bracket 2. Bolt (2 required)
- 3. Vacuum and water distribution manifold

1. Windshield washer nozzle

- 4. Filter
- 5. Windshield washer reservoir assembly (SHO)

- 6. Windshield washer hose 7. Windshield washer
 - reservoir
- A. Tighten to 1.8-2.6 N.m. (16-23 lb-in)