


Blade replacement

1. Cycle arm and blade assembly to up position on the windshield where removal of blade assembly can be performed without difficulty. Turn ignition key off at desired position.
2. To remove blade assembly, insert screwdriver in slot, push down on spring lock and pull blade assembly from pin (View A).
3. To install, push the blade assembly on the pin so that the spring lock engages the pin (View A). Be sure the blade assembly is securely attached to pin.

VIEW A

NOTE: INSERT SCREWDRIVER
3.2mm(1/8") OR LESS PAST
THIS EDGE

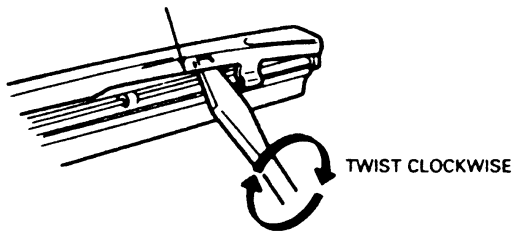


TWIST CLOCKWISE

Element replacement


1. Insert screwdriver between the edge of the super structure and the blade backing drip (View B). Twist screwdriver slowly until element clears one side of the super structure claw.
2. Slide the element out of all the super structure claws.

VIEW B

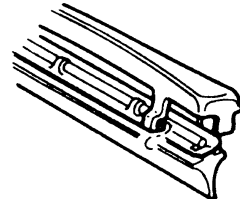

4. Insert element into one side of the end claws (View D) and with a rocking motion push element upward until it snaps in (View E).

VIEW D

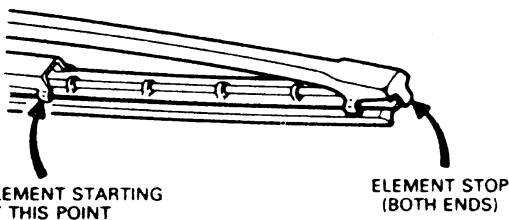


SLIDE ELEMENT STARTING
AT THIS POINT

ELEMENT STOP
(BOTH ENDS)

3. Slide the element into the super structure claws, starting with second set from either end (View C) and continue to slide the blade element into all the super structure claws to the element stop (View C).

VIEW C

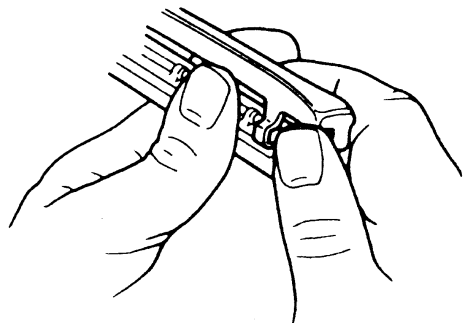

VIEW E