



NOTE: SUPPRESSOR WIRE MUST BE INSTALLED AT ORIENTATION SHOWN TO ALLOW RETAINER TO FULLY ENGAGE COIL TOWER

VIEW A

- 1 Ignition coil to distributor high tension wiring
- 2 Distributor cap
- 3 Ignition coil mounting bracket
- 4A Nut (2 req'd)
- 5 Ignition coil
- 6B Screw
- 7 Radio ignition interference capacitor
- 8B Screw (4 req'd)
- A Tighten to 40-50 Nm (30-41 lb.ft.)
- B Tighten to 2.8-4.0 Nm (25-35 lb.in.)