



- △ SERVICE:**
1. DISCONNECT BATTERY CABLES
  2. DRAIN RADIATOR
  3. DISCHARGE A/C

- REMOVE/INSTALL:**
10. AIR CLEANER ASSEMBLY
  11. BATTERY AND TRAY
  12. CONSTANT CONTROL RELAY MODULE FAN SHROUD AND RADIATOR
  13. ENGINE NVH BRACKET TO SHOCK TOWER

- DISCONNECT/CONNECT:**
20. EVAPORATIVE EMISSION LINE
  21. UPPER RADIATOR HOSE
  22. STARTER BRACE

- DISCONNECT/CONNECT-WIRING:**
23. LOWER RADIATOR HOSE
  24. EXHAUST MANIFOLD AT PIPE
  25. POWER STEERING PUMP LINES
  26. FUEL LINES
  27. VACUUM LINES
  28. EXHAUST MANIFOLD AT PIPE
  29. GROUND STRAP
  30. HEATER LINES
  31. ACCELERATOR CABLE LINKAGE THROTTLE VALVE LINKAGE, SPEED CONTROL ACTUATOR
  40. GENERATOR
  41. A/C CLUTCH
  42. HO2S