



△ SERVICE:

- 1 Disconnect battery cables
- 2 Drain radiator
- 3 Discharge A/C

□ REMOVE/INSTALL:

- 4 Air cleaner
- 5 Battery and tray
- 6 Constant control relay module, cooling fan shroud and radiator
- 7 Engine damper bracket to shock tower

○ DISCONNECT/CONNECT-WIRING:

- 20 Generator
- 21 A/C clutch
- 22 HO2S

○ DISCONNECT/CONNECT:

- 8 Evaporative emission line
- 9 Upper radiator hose
- 10 Starter brace
- 11 Lower radiator hose
- 12 Exhaust manifold at pipe
- 13 Power steering pump lines
- 14 Fuel lines
- 15 Vacuum lines
- 16 Exhaust manifold at pipe
- 17 Ground strap
- 18 Heater lines
- 19 Accelerator cable linkage throttle valve linkage, speed control actuator