



○ DISCONNECT/CONNECT-WIRING:

- 1 12A581 Engine control sensor
- 2 Fuel charging wiring harness 9D930 including 6 injectors, IAT sensor, IAC and throttle position sensor
- 3 Oil pressure sending switch
- 4 Ground wire
- 5 Block heater
- 6 Low oil level sensor
- 7 Water temperature indicator sender unit

△ INSTALL:

- A Lifting bolts/lifting chains

□ REMOVE/INSTALL:

- 8 Wiring harness