

Temperature		Engine Coolant/Air Charge Temperature Sensor Values	
°F	°C	Voltage (volts)	Resistance (K ohms)
248	120	.27	1.18
230	110	.35	1.55
212	100	.46	2.07
194	90	.60	2.80
176	80	.78	3.84
158	70	1.02	5.37
140	60	1.33	7.70
122	50	1.70	10.97
104	40	2.13	16.15
86	30	2.60	24.27
68	20	3.07	37.30
50	10	3.51	58.75