

- 1. To throttle position sensor
- 2. Fuel injector wiring harness
- 3. To PFE transducer assy
- 4. To air charge temperature sensor
- 5. Fuel injector assy (6 req'd)
- 6. To harness assy
- 7. To oil pressure switch assy
- 8. To EGR vacuum regulator assy
- 9. To idle speed control
- To engine coolant temperature sensor