

- Fuel tank to floor pan insulator (2 required)
- 2. Fuel vapor valve
- 3. Fuel pump module
- 4. Fuel pump locking retainer ring
- Fuel tank
- 6. Fuel pump mounting gasket
- Fuel pump (part of fuel pump module)
- 8. Gasket

- 9. Fuel tank support strap10. Pin (2 required)
- 11. Bolt (2 required)
- 12. Nut (2 required)
- 13. Fuel tank filler cap14. Fuel tank filler pipe
- 15. Bolt 16. Body 17. Bolt

- 18. Hose clamp
- 19. Hose clamp 20. Hose clamp
- 21. Hose clamp
- 22. Crossmember
 - 23. Bolt
 A. Tighten to 29-41 N.m (22-30 lb-ft)
 - B. Tighten to 2.7-3.7 N.m (24-32 lb-in) C. Tighten to 4.0-6.0 N.m (35-53 lb-in)