

TO REMOVE, DISENGAGE ACTUATOR FROM BRACKET. LIFT UPWARD 1/2 INCH, THEN TOWARD PASSENGER COMPARTMENT.

