



- |                                |   |
|--------------------------------|---|
| 1 Instrument cluster           | 14 RH turn signal indicator   |
| 2 Low washer fluid indicator   | 15 Transmission range indicator<br>(Automatic transaxle non-floor shift only) |
| 3 Tachometer                   | 16 Transmission control indicator only<br>(Taurus SHO only)                   |
| 4 Speedometer                  | 17 Engine coolant level indicator<br>(Taurus SHO only)                        |
| 5 Odometer reset shaft         | 18 LH turn signal indicator   |
| 6 Fuel gauge                   | 19 High beam indicator  |
| 7 Low fuel indicator           | 20 Charging system (Amp) indicator  |
| 8 Lamp out indicator           | 21 Brake warning indicator  |
| 9 Door ajar indicator          | 22 Anti-lock indicator  |
| 10 Low oil indicator           | 23 Low oil pressure indicator   |
| 11 Air bag readiness indicator |   |
| 12 Malfunction indicator lamp  |   |
| 13 Safety belt indicator       |   |