



NOTE: THIS BRACKET MAY BE DISCARDED WHEN REPLACEMENTS OR ADJUSTMENTS OF SWITCH IS REQUIRED.

- | | |
|--|--|
| 1. Retaining clip (2 req'd) | 16. Pivot sleeve |
| 2. Clutch pedal pawl pin | 17. Clutch and brake pedal shaft spring washer |
| 3. Clutch pedal quadrant adjuster pawl | 18. Clutch release idler lever rod bushing (2 req'd) |
| 4. Clutch pedal pawl spring | 19. Clutch pedal |
| 5. Nut (3 req'd) | 20. Clutch pedal lever assist spring |
| 6. Clutch release cable insulator | 21. Clutch pedal adjuster quadrant |
| 7. Screw (2 req'd) | 22. Pivot bolt |
| 8. Clutch pedal stop | 23. Dash panel grommet |
| 9. Clutch pedal position switch mounting bracket | 24. Clutch release lever cable |
| 10. Clutch pedal shield | 25. Bracket (part of 11A152) |
| 11. Clutch release plate | 26. Bolt |
| 12. Spacer nut | 27. Clip |
| 13. Clutch pedal bumper bracket | A. Tighten to 20-34 N.m (15-25 lb-ft) |
| 14. Clutch pedal position switch | B. Tighten to 8-12 N.m (71-106 lb-in) |
| 15. Pad | C. Tighten to 28-45 N.m (21-33 lb-ft) |