



- 1 Arbor press
- 2 Front bearing remover/replacer
- 3 Front wheel knuckle and bearing assembly
- 4 Face plate
- 5 Step side up
- 6 Front bearing spacer