


DUST SEAL INSTALLATION

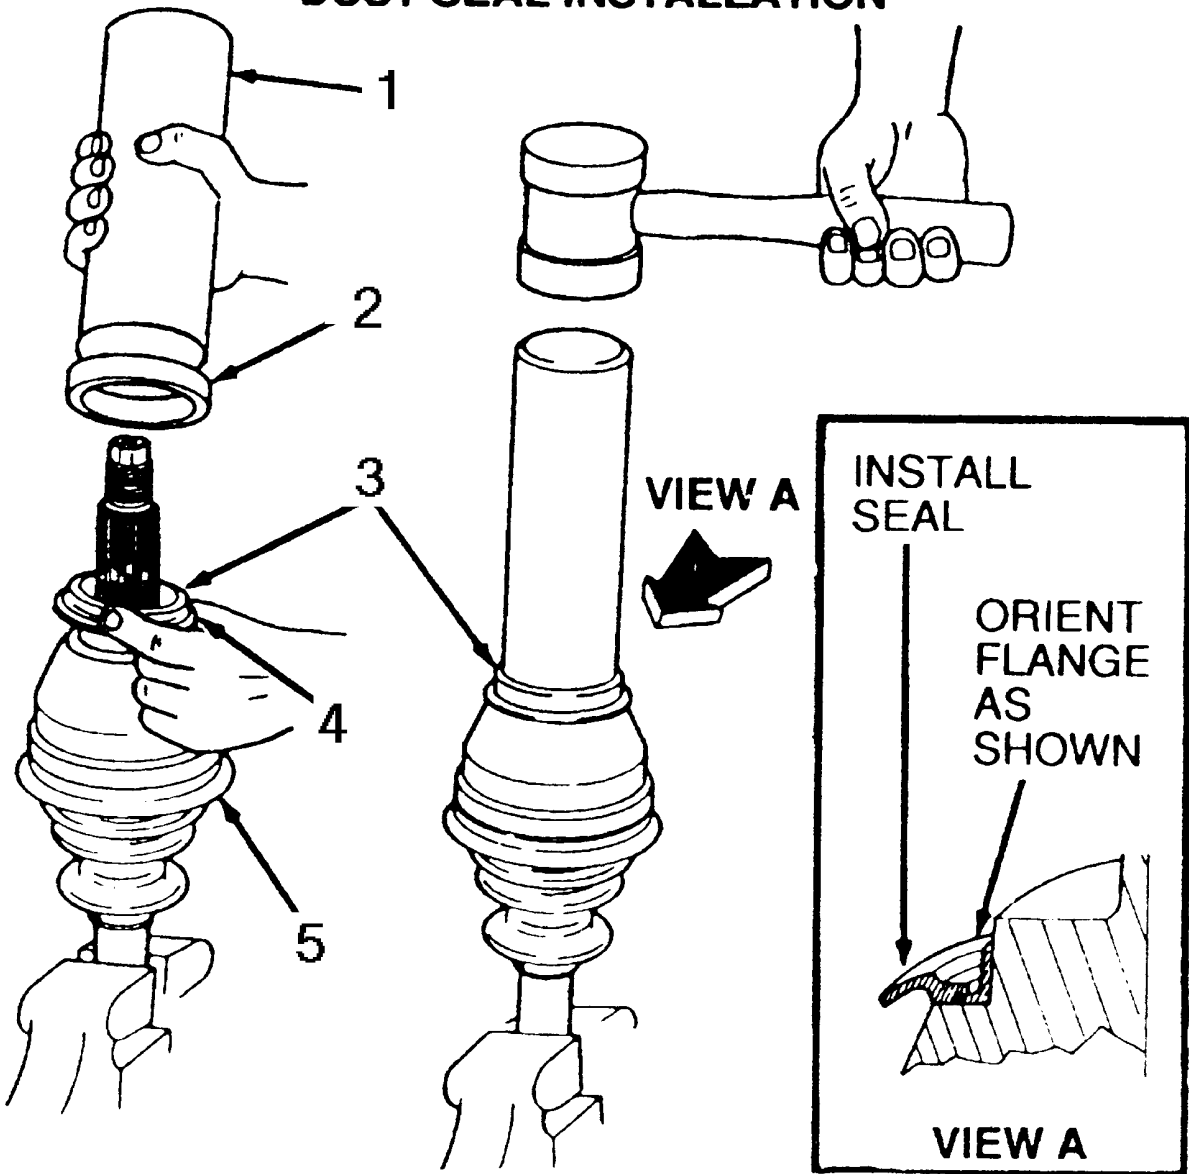

NOTE: CLAMP HALFSHAFT IN VISE AND INSTALL USING SPINDLE AXLE SEAL REPLACER T83T-3132-A1 AND FRONT BEARING DUST SEAL REPLACER T89P-1104-A4 WITH SEAL FLANGE FACING OUTBOARD.

- 1 Spindle axle seal replacer
- 2 Front bearing dust seal replacer
- 3 Front bearing dust seal
- 4 Front bearing dust seal flange
- 5 Front wheel driveshaft joint