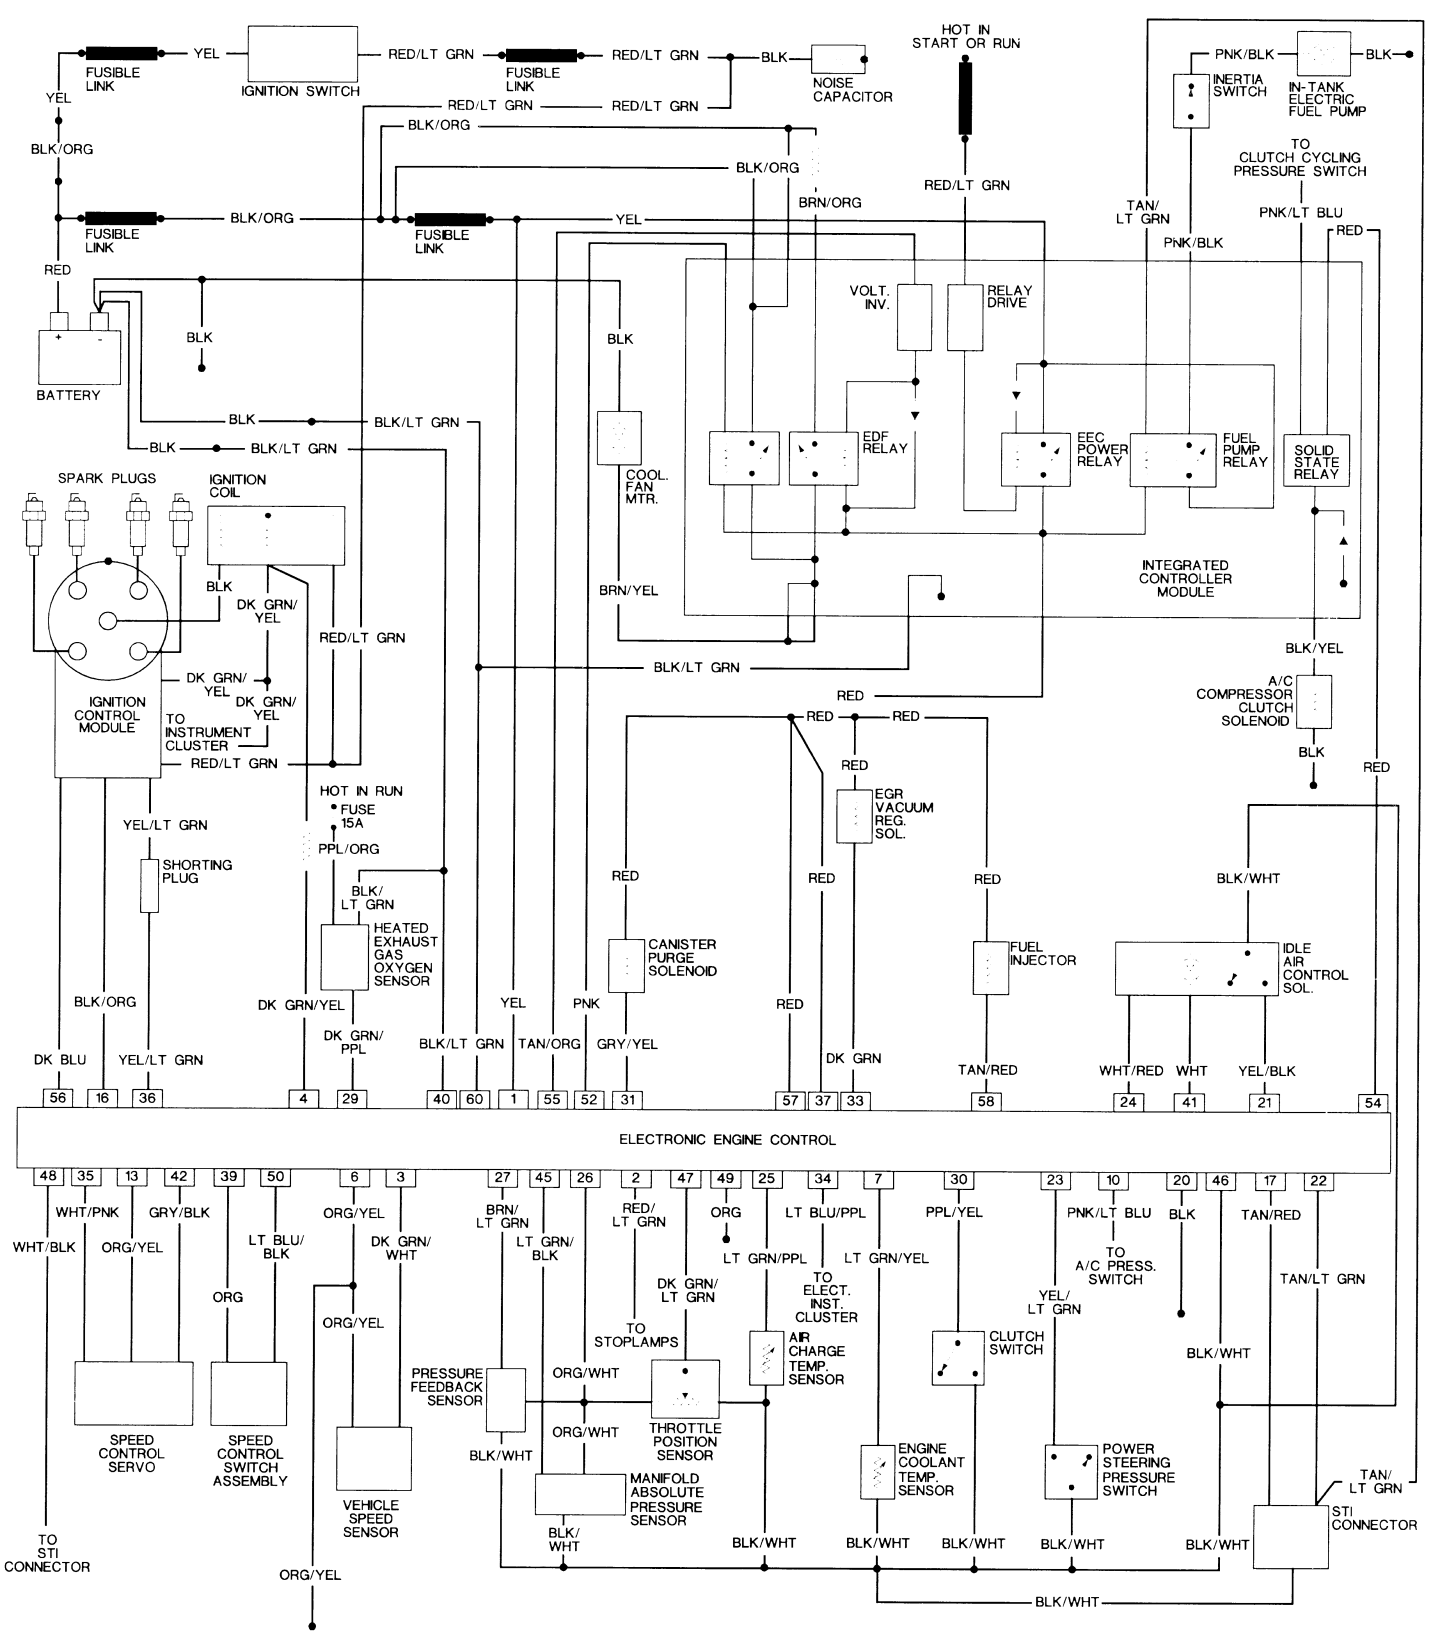
FUSIBLE LINK
YEL
IGNITION SWITCH
RED/LT GRN
FUSIBLE LINK
RED/LT GRN
BLK
NOISE CAPACITOR
HOT IN START OR RUN
PNK/BLK
BLK
INERTIA SWITCH
IN-TANK ELECTRIC FUEL PUMP
TO CLUTCH CYCLING PRESSURE SWITCH
BLK/ORG
BRN/ORG
TAN/LT GRN
PNK/LT BLU
RED
BATTERY
VOLT. INV.
RELAY DRIVE
EDF RELAY
EEC POWER RELAY
FUEL PUMP RELAY
SOLID STATE RELAY
COOL. FAN MTR.
BRN/YEL
INTEGRATED CONTROLLER MODULE
BLK/LT GRN
SPARK PLUGS
IGNITION COIL
DK GRN/YEL
RED/LT GRN
IGNITION CONTROL MODULE
TO INSTRUMENT CLUSTER
BLK/YEL
A/C COMPRESSOR CLUTCH SOLENOID
HOT IN RUN
FUSE 15A
PPL/ORG
YEL/LT GRN
SHORTING PLUG
BLK/LT GRN
HEATED EXHAUST GAS OXYGEN SENSOR
EGR VACUUM REG. SOL.
CANISTER PURGE SOLENOID
FUEL INJECTOR
IDLE AIR CONTROL SOL.
BLK/WHT
DK GRN/YEL
DK GRN/PPL
BLK/LT GRN
TAN/ORG
GRY/YEL
DK GRN
TAN/RED
WHT/RED
WHT
YEL/BLK
DK BLU
YEL/LT GRN
56
16
36
4
29
40
60
1
55
52
31
57
37
33
58
24
41
21
54
ELECTRONIC ENGINE CONTROL
48
35
13
42
39
50
6
3
27
45
26
2
47
49
25
34
7
30
23
10
20
46
17
22
WHT/BLK
WHT/PNK
ORG/YEL
GRY/BLK
ORG
LT BLU/BLK
ORG/YEL
DK GRN/WHT
BRN/LT GRN
LT GRN/BLK
RED/LT GRN
ORG
LT GRN/PPL
LT BLU/PPL
LT GRN/YEL
PPL/YEL
YEL/LT GRN
PNK/LT BLU
TO A/C PRESS. SWITCH
BLK
TAN/RED
TAN/LT GRN
TO STOPLAMPS
DK GRN/LT GRN
TO ELECT. INST. CLUSTER
SPEED CONTROL SERVO
SPEED CONTROL SWITCH ASSEMBLY
VEHICLE SPEED SENSOR
PRESSURE FEEDBACK SENSOR
ORG/WHT
THROTTLE POSITION SENSOR
AIR CHARGE TEMP. SENSOR
CLUTCH SWITCH
BLK/WHT
MANIFOLD ABSOLUTE PRESSURE SENSOR
ENGINE COOLANT TEMP. SENSOR
POWER STEERING PRESSURE SWITCH
STI CONNECTOR
TO STI CONNECTOR
BLK/WHT
ORG/YEL