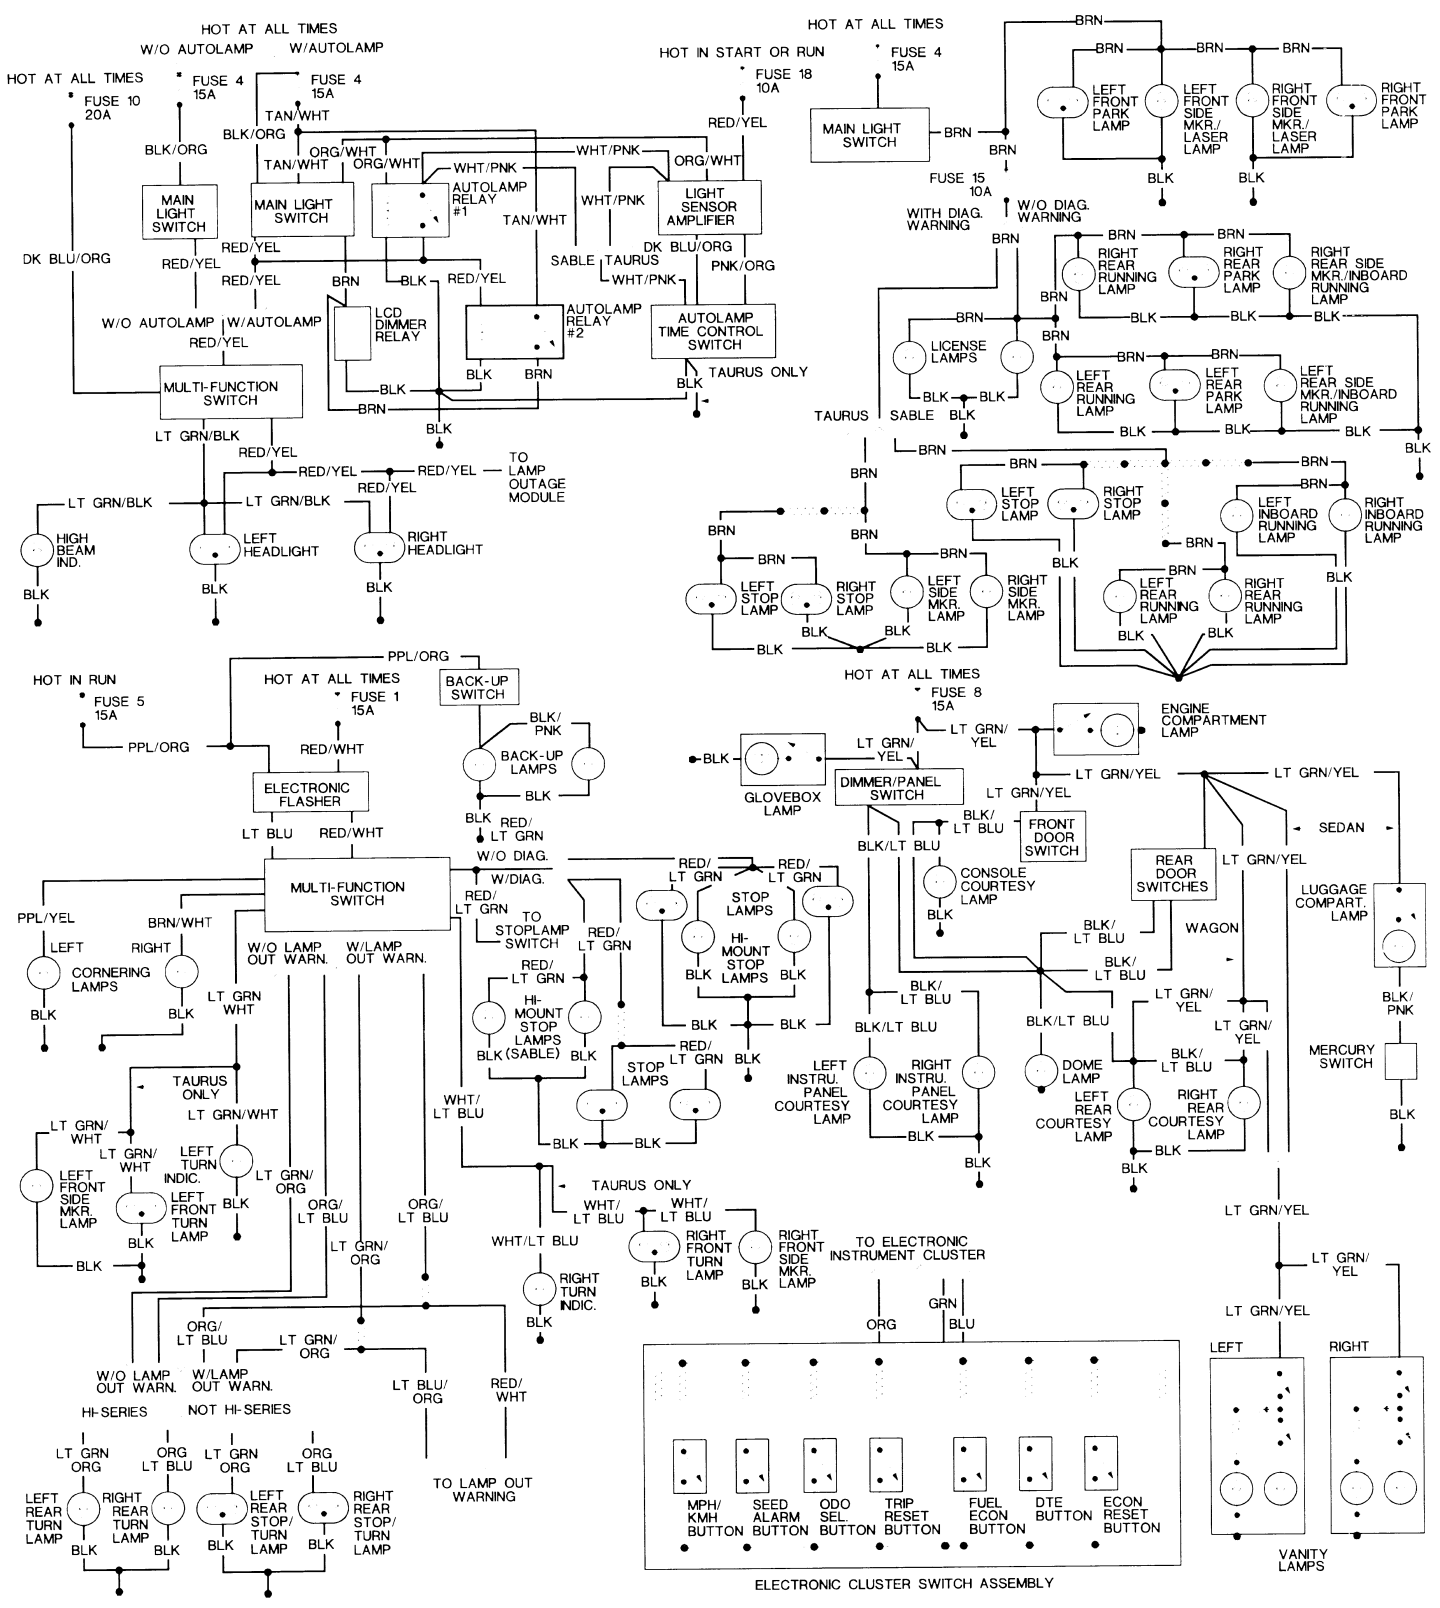
HOT AT ALL TIMES
W/O AUTOLAMP
W/AUTOLAMP
HOT AT ALL TIMES
FUSE 10 20A
FUSE 4 15A
FUSE 4 15A
HOT IN START OR RUN
FUSE 18 10A
HOT AT ALL TIMES
FUSE 4 15A
MAIN LIGHT SWITCH
MAIN LIGHT SWITCH
AUTOLAMP RELAY #1
LIGHT SENSOR AMPLIFIER
LEFT FRONT PARK LAMP
LEFT FRONT SIDE MKR./ LASER LAMP
RIGHT FRONT SIDE MKR./ LASER LAMP
RIGHT FRONT PARK LAMP
FUSE 15 10A
W/O DIAG. WARNING
WITH DIAG. WARNING
RIGHT REAR RUNNING LAMP
RIGHT REAR PARK LAMP
RIGHT REAR SIDE MKR./INBOARD RUNNING LAMP
LICENSE LAMPS
LEFT REAR RUNNING LAMP
LEFT REAR PARK LAMP
LEFT REAR SIDE MKR./INBOARD RUNNING LAMP
TAURUS
SABLE
LCD DIMMER RELAY
AUTOLAMP RELAY #2
AUTOLAMP TIME CONTROL SWITCH
TAURUS ONLY
W/O AUTOLAMP
W/AUTOLAMP
MULTI-FUNCTION SWITCH
TO LAMP OUTAGE MODULE
HIGH BEAM IND.
LEFT HEADLIGHT
RIGHT HEADLIGHT
LEFT STOP LAMP
RIGHT STOP LAMP
LEFT SIDE MKR. LAMP
RIGHT SIDE MKR. LAMP
LEFT INBOARD RUNNING LAMP
RIGHT INBOARD RUNNING LAMP
LEFT REAR RUNNING LAMP
RIGHT REAR RUNNING LAMP
HOT IN RUN
FUSE 5 15A
HOT AT ALL TIMES
FUSE 1 15A
BACK-UP SWITCH
BACK-UP LAMPS
ELECTRONIC FLASHER
HOT AT ALL TIMES
FUSE 8 15A
ENGINE COMPARTMENT LAMP
GLOVEBOX LAMP
DIMMER/PANEL SWITCH
FRONT DOOR SWITCH
CONSOLE COURTESY LAMP
REAR DOOR SWITCHES
SEDAN
WAGON
LUGGAGE COMPART. LAMP
MERCURY SWITCH
MULTI-FUNCTION SWITCH
W/O DIAG.
W/DIAG.
TO STOPLAMP SWITCH
STOP LAMPS
HI-MOUNT STOP LAMPS
HI-MOUNT STOP LAMPS BLK (SABLE)
CORNERING LAMPS
LEFT
RIGHT
W/O LAMP OUT WARN.
W/LAMP OUT WARN.
TAURUS ONLY
LEFT INSTRU. PANEL COURTESY LAMP
RIGHT INSTRU. PANEL COURTESY LAMP
DOME LAMP
LEFT REAR COURTESY LAMP
RIGHT REAR COURTESY LAMP
LEFT FRONT SIDE MKR. LAMP
LEFT TURN INDIC.
LEFT FRONT TURN LAMP
RIGHT TURN INDIC.
RIGHT FRONT TURN LAMP
RIGHT FRONT SIDE MKR. LAMP
TO ELECTRONIC INSTRUMENT CLUSTER
HI-SERIES
NOT HI-SERIES
LEFT REAR TURN LAMP
RIGHT REAR TURN LAMP
LEFT REAR STOP/ TURN LAMP
RIGHT REAR STOP/ TURN LAMP
TO LAMP OUT WARNING
MPH/ KMH BUTTON
SEED ALARM BUTTON
ODO SEL. BUTTON
TRIP RESET BUTTON
FUEL ECON BUTTON
DTE BUTTON
ECON RESET BUTTON
ELECTRONIC CLUSTER SWITCH ASSEMBLY
LEFT
RIGHT
VANITY LAMPS