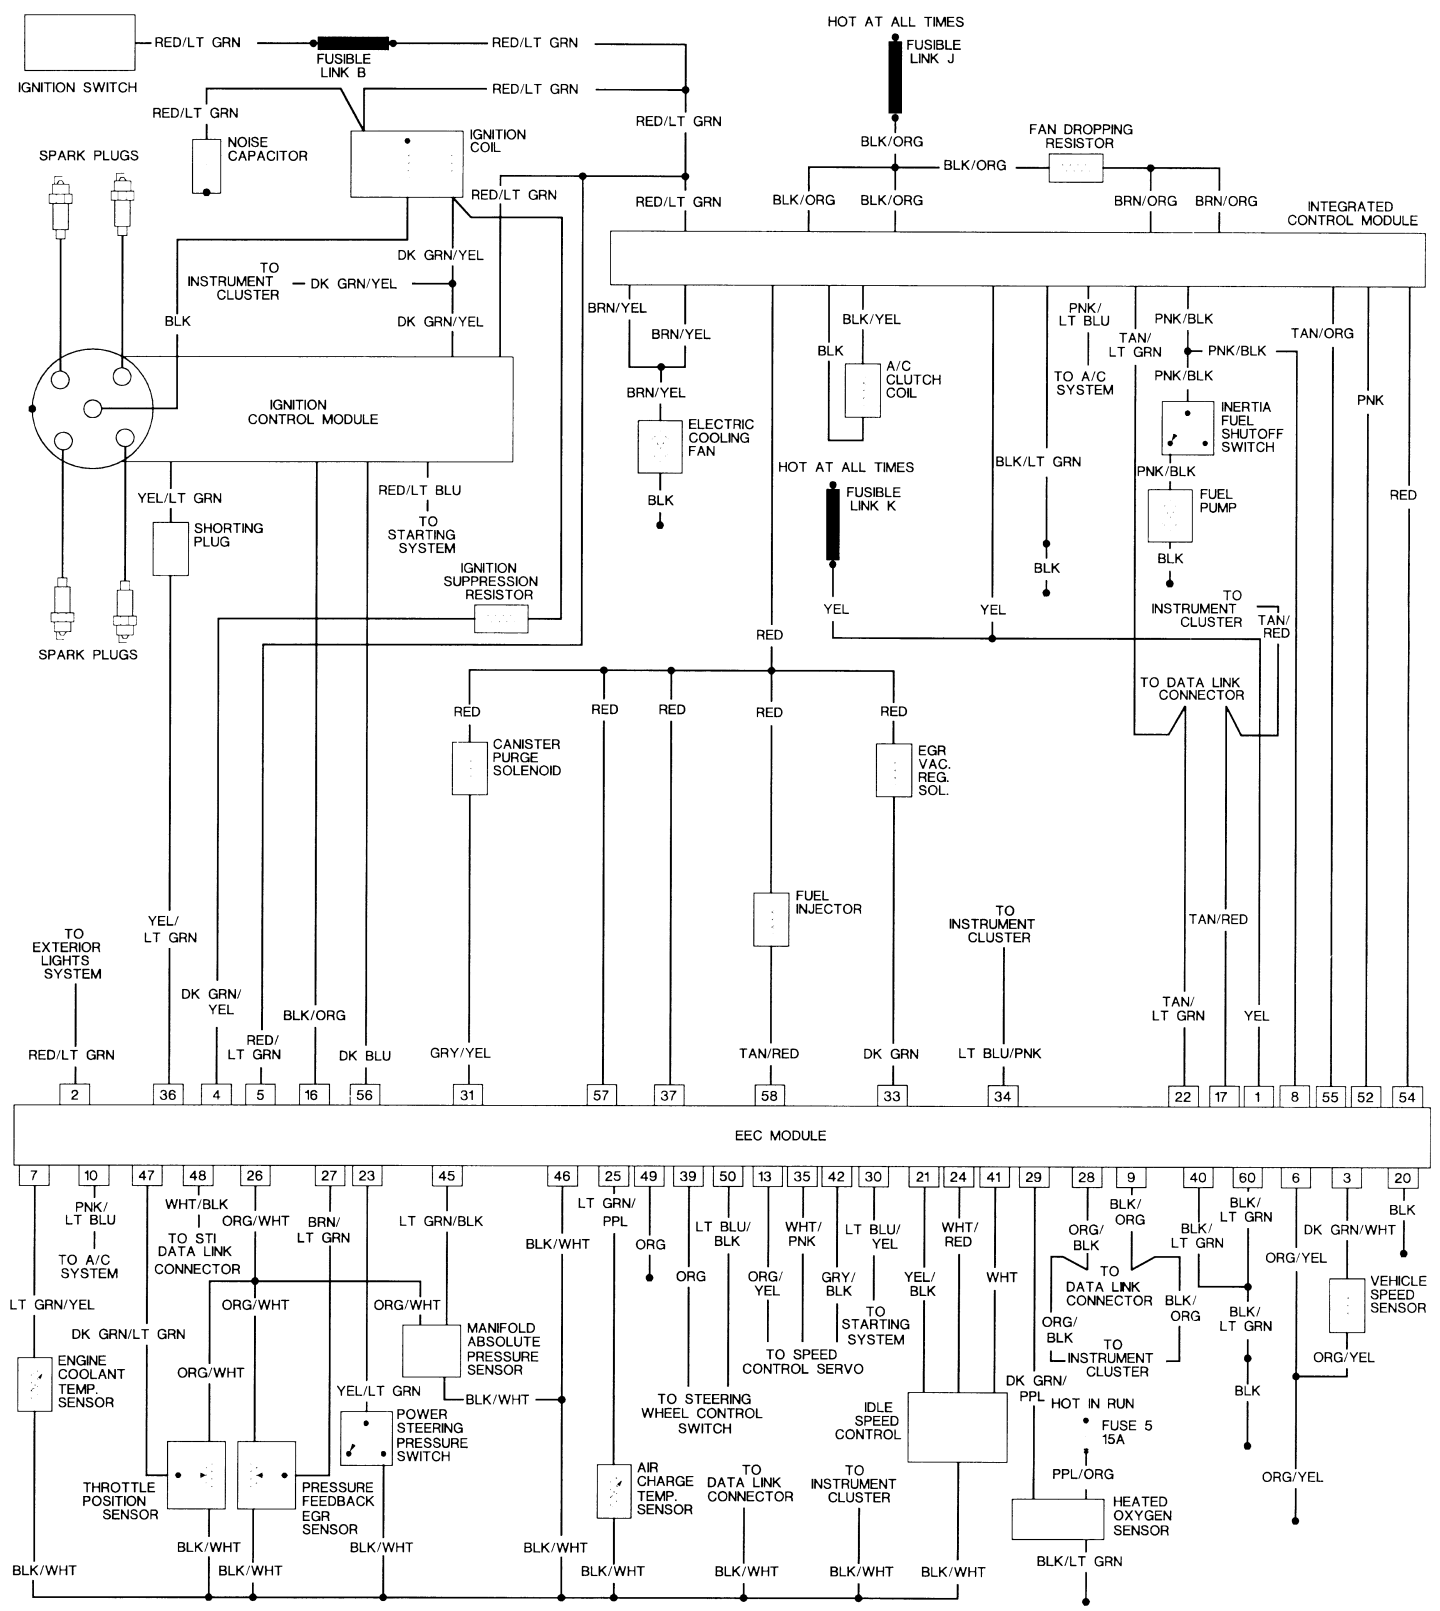
IGNITION SWITCH
RED/LT GRN
FUSIBLE LINK B
RED/LT GRN
RED/LT GRN
RED/LT GRN
NOISE CAPACITOR
IGNITION COIL
RED/LT GRN
RED/LT GRN
SPARK PLUGS
DK GRN/YEL
TO INSTRUMENT CLUSTER
DK GRN/YEL
BLK
DK GRN/YEL
IGNITION CONTROL MODULE
YEL/LT GRN
SHORTING PLUG
RED/LT BLU
TO STARTING SYSTEM
IGNITION SUPPRESSION RESISTOR
SPARK PLUGS
HOT AT ALL TIMES
FUSIBLE LINK J
BLK/ORG
BLK/ORG
FAN DROPPING RESISTOR
BLK/ORG
BLK/ORG
BRN/ORG
BRN/ORG
INTEGRATED CONTROL MODULE
BRN/YEL
BRN/YEL
BRN/YEL
ELECTRIC COOLING FAN
BLK
BLK/YEL
BLK
A/C CLUTCH COIL
HOT AT ALL TIMES
FUSIBLE LINK K
YEL
PNK/ LT BLU
TO A/C SYSTEM
BLK/LT GRN
BLK
YEL
TAN/ LT GRN
PNK/BLK
PNK/BLK
INERTIA FUEL SHUTOFF SWITCH
PNK/BLK
FUEL PUMP
BLK
TO INSTRUMENT CLUSTER
TAN/ RED
TAN/ORG
PNK
RED
TO DATA LINK CONNECTOR
RED
RED
RED
RED
RED
CANISTER PURGE SOLENOID
EGR VAC. REG. SOL.
FUEL INJECTOR
TO INSTRUMENT CLUSTER
TO EXTERIOR LIGHTS SYSTEM
RED/LT GRN
YEL/ LT GRN
DK GRN/ YEL
RED/ LT GRN
BLK/ORG
DK BLU
GRY/YEL
TAN/RED
DK GRN
LT BLU/PNK
TAN/ LT GRN
TAN/RED
YEL
2
36
4
5
16
56
31
57
37
58
33
34
22
17
1
8
55
52
54
EEC MODULE
7
10
47
48
26
27
23
45
46
25
49
39
50
13
35
42
30
21
24
41
29
28
9
40
60
6
3
20
PNK/ LT BLU
TO A/C SYSTEM
WHT/BLK
TO STI DATA LINK CONNECTOR
ORG/WHT
BRN/ LT GRN
LT GRN/BLK
BLK/WHT
LT GRN/ PPL
ORG
ORG
LT BLU/ BLK
ORG/ YEL
WHT/ PNK
GRY/ BLK
LT BLU/ YEL
YEL/ BLK
WHT/ RED
WHT
ORG/ BLK
BLK/ ORG
ORG/ BLK
BLK/ LT GRN
BLK/ LT GRN
DK GRN/WHT
BLK
LT GRN/YEL
ORG/WHT
ORG/WHT
ORG/WHT
DK GRN/LT GRN
ENGINE COOLANT TEMP. SENSOR
ORG/WHT
MANIFOLD ABSOLUTE PRESSURE SENSOR
YEL/LT GRN
BLK/WHT
POWER STEERING PRESSURE SWITCH
TO STEERING WHEEL CONTROL SWITCH
TO SPEED CONTROL SERVO
TO STARTING SYSTEM
IDLE SPEED CONTROL
TO DATA LINK CONNECTOR
TO INSTRUMENT CLUSTER
TO DATA LINK CONNECTOR
TO INSTRUMENT CLUSTER
BLK/ LT GRN
ORG/YEL
VEHICLE SPEED SENSOR
ORG/YEL
BLK
ORG/YEL
THROTTLE POSITION SENSOR
PRESSURE FEEDBACK EGR SENSOR
AIR CHARGE TEMP. SENSOR
DK GRN/ PPL
HOT IN RUN
FUSE 5 15A
PPL/ORG
HEATED OXYGEN SENSOR
BLK/LT GRN
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT