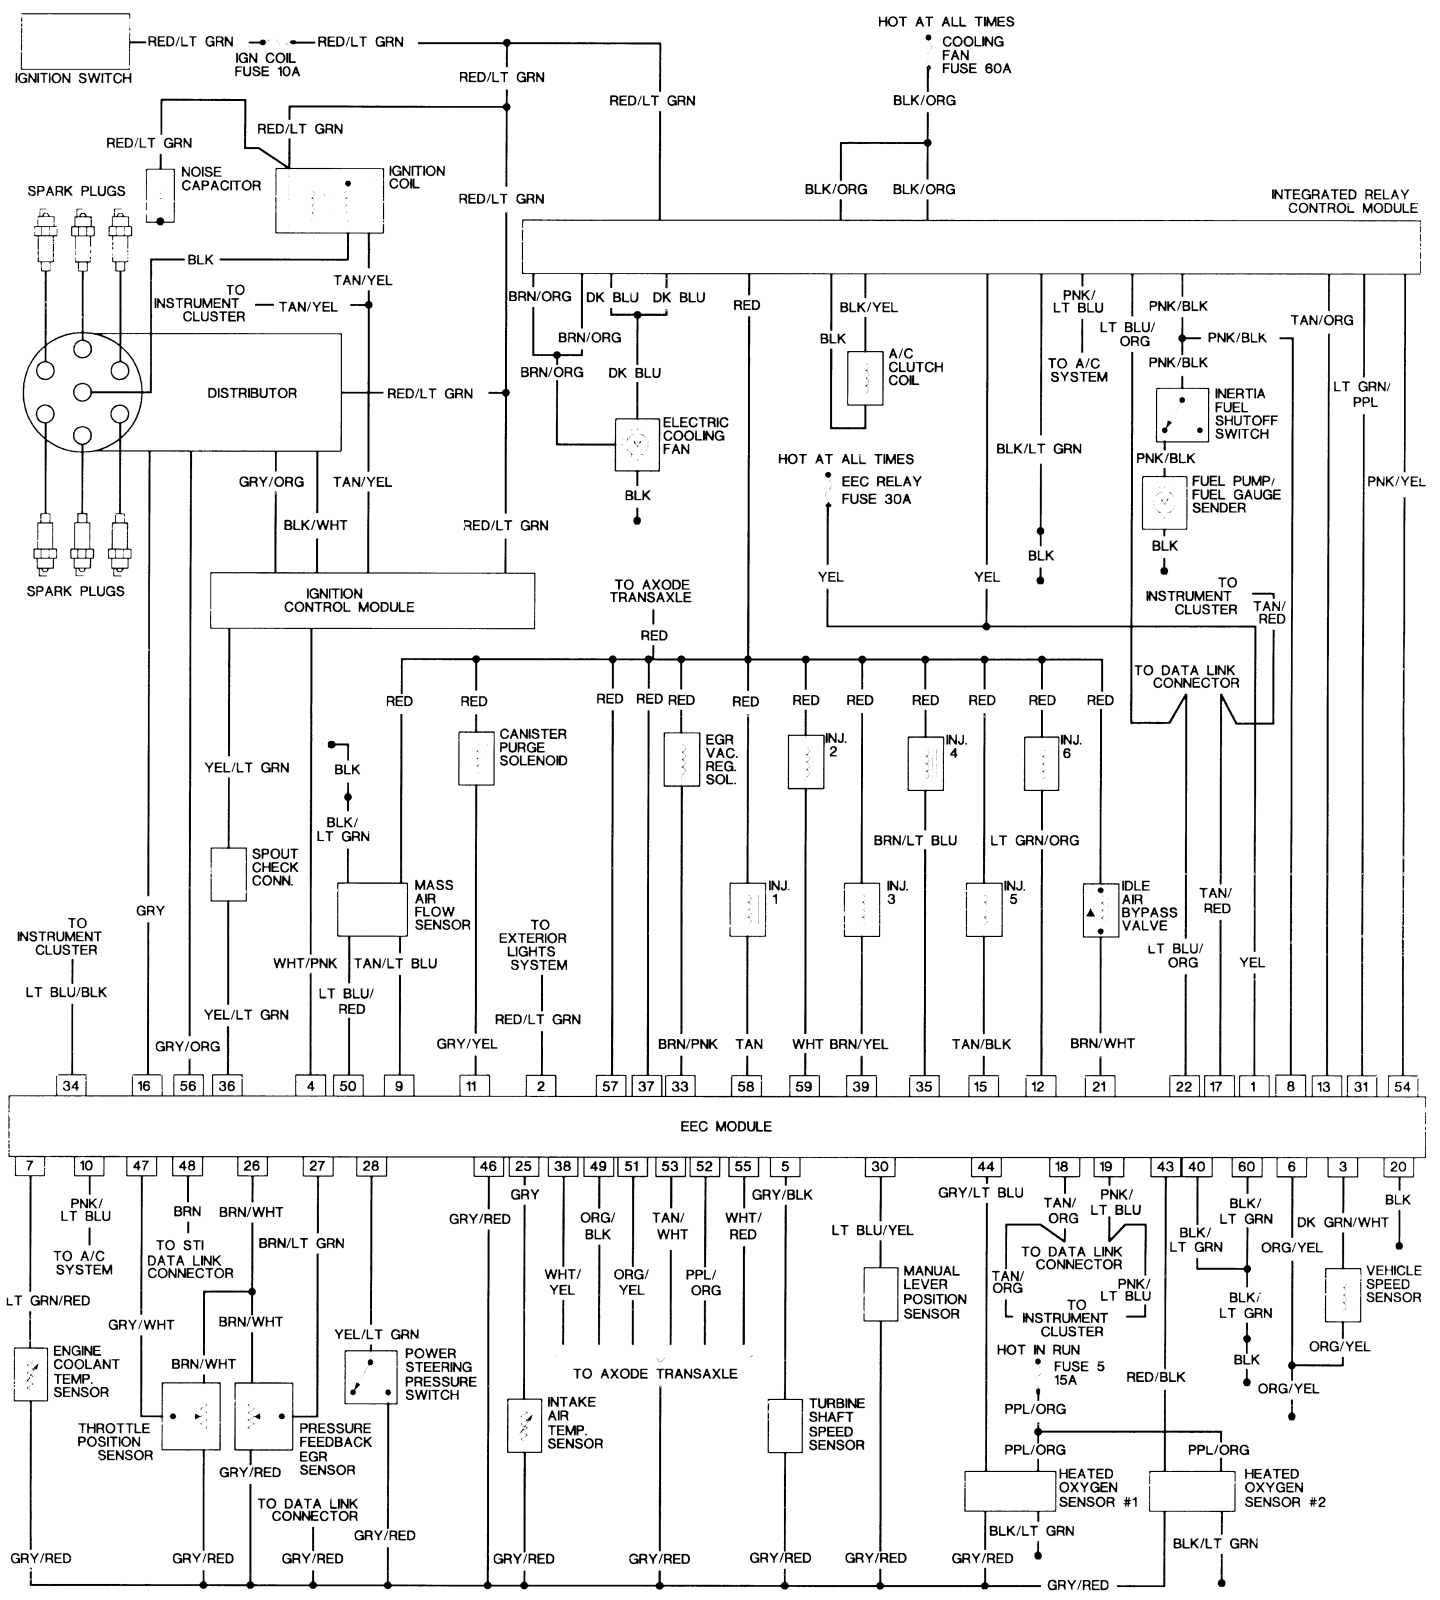
IGNITION SWITCH
RED/LT GRN
IGN COIL FUSE 10A
HOT AT ALL TIMES
COOLING FAN FUSE 60A
BLK/ORG
INTEGRATED RELAY CONTROL MODULE
NOISE CAPACITOR
IGNITION COIL
SPARK PLUGS
BLK
TAN/YEL
TO INSTRUMENT CLUSTER
DISTRIBUTOR
BRN/ORG
DK BLU
RED
BLK/YEL
A/C CLUTCH COIL
TO A/C SYSTEM
PNK/LT BLU
LT BLU/ORG
PNK/BLK
TAN/ORG
INERTIA FUEL SHUTOFF SWITCH
LT GRN/PPL
ELECTRIC COOLING FAN
HOT AT ALL TIMES
EEC RELAY FUSE 30A
BLK/LT GRN
FUEL PUMP/ FUEL GAUGE SENDER
PNK/YEL
GRY/ORG
BLK/WHT
IGNITION CONTROL MODULE
TO AXODE TRANSAXLE
TO DATA LINK CONNECTOR
TAN/RED
CANISTER PURGE SOLENOID
EGR VAC. REG. SOL.
INJ. 1
INJ. 2
INJ. 3
INJ. 4
INJ. 5
INJ. 6
YEL/LT GRN
SPOUT CHECK CONN.
MASS AIR FLOW SENSOR
IDLE AIR BYPASS VALVE
TO EXTERIOR LIGHTS SYSTEM
LT BLU/BLK
WHT/PNK
TAN/LT BLU
LT BLU/RED
BRN/LT BLU
LT GRN/ORG
LT BLU/ORG
GRY/YEL
BRN/PNK
TAN
WHT
BRN/YEL
TAN/BLK
BRN/WHT
34
16
56
36
4
50
9
11
2
57
37
33
58
59
39
35
15
12
21
22
17
1
8
13
31
54
EEC MODULE
7
10
47
48
26
27
28
46
25
38
49
51
53
52
55
5
30
44
18
19
43
40
60
6
3
20
PNK/LT BLU
TO A/C SYSTEM
BRN
TO STI DATA LINK CONNECTOR
BRN/WHT
BRN/LT GRN
GRY/RED
LT GRN/RED
GRY/WHT
ENGINE COOLANT TEMP. SENSOR
THROTTLE POSITION SENSOR
PRESSURE FEEDBACK EGR SENSOR
YEL/LT GRN
POWER STEERING PRESSURE SWITCH
TO DATA LINK CONNECTOR
GRY
WHT/YEL
ORG/BLK
ORG/YEL
TAN/WHT
PPL/ORG
WHT/RED
GRY/BLK
TO AXODE TRANSAXLE
INTAKE AIR TEMP. SENSOR
TURBINE SHAFT SPEED SENSOR
LT BLU/YEL
MANUAL LEVER POSITION SENSOR
GRY/LT BLU
TAN/ORG
PNK/LT BLU
TO DATA LINK CONNECTOR
TO INSTRUMENT CLUSTER
HOT IN RUN
FUSE 5 15A
PPL/ORG
HEATED OXYGEN SENSOR #1
HEATED OXYGEN SENSOR #2
BLK/LT GRN
RED/BLK
ORG/YEL
DK GRN/WHT
VEHICLE SPEED SENSOR
BLK