


\*ALSO SUPPLIED IN  
KIT E35Y-19D690-A


3/8" - 391396-S100\*  
1/2" - 391397-S100\*  
5/8" - 391304-S100\*  
3/4" - 391307-S100

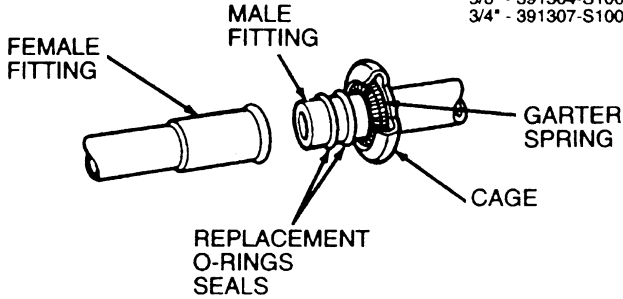

**SPRING LOCK COUPLING DISCONNECTED**

**TO CONNECT COUPLING**

GARTER SPRING

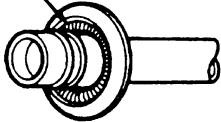


REPLACEMENT GARTER SPRINGS  
3/8" - E1ZZ-19E576-A\*  
1/2" - E1ZZ-19E576-B\*  
5/8" - E35Y-19E576-A\*  
3/4" - E69Z-19E576-A\*  
\*ALSO AVAILABLE IN  
E35Y-19D690-A KIT WITH O-RINGS

**1** CHECK FOR MISSING OR DAMAGED GARTER SPRING— REMOVE DAMAGED SPRING WITH SMALL HOOKED WIRE—INSTALL NEW SPRING IF DAMAGED OR MISSING.

**TO DISCONNECT COUPLING**  
**CAUTION — DISCHARGE SYSTEM BEFORE DISCONNECTING COUPLING**


SPRING LOCK COUPLING  
DISCONNECT TOOL  
T81P-19623-G1 - 3/8 INCH  
T81P-19623-G2 - 1/2 INCH  
T83P-19623-C - 5/8 INCH  
T85L-19623-A - 3/4 INCH

CAGE  
OPENING

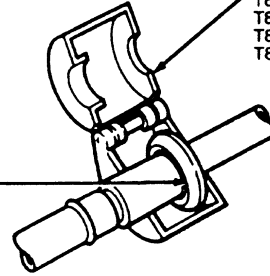

**1** FIT TOOL TO COUPLING SO THAT TOOL CAN ENTER CAGE OPENING TO RELEASE THE GARTER SPRING.


PUSH TOOL INTO  
CAGE OPENING

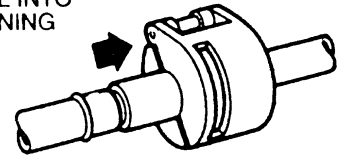

**2** PUSH THE TOOL INTO THE CAGE OPENING TO RELEASE THE FEMALE FITTING FROM THE GARTER SPRING.

A—CLEAN FITTINGS

B—INSTALL NEW  
O-RING SEALS —  
USE ONLY SPECIFIED  
O-RING SEALS

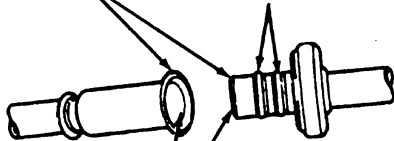


C—LUBRICATE WITH  
CLEAN REFRIGERANT  
OIL


D—ASSEMBLE FITTING  
TOGETHER BY PUSHING  
WITH A SLIGHT TWISTING  
MOTION

**3** PULL THE COUPLING MALE AND FEMALE FITTINGS APART.

GARTER SPRING

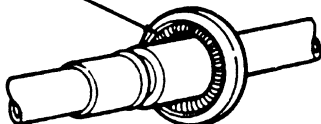

**3** TO ENSURE COUPLING ENGAGEMENT, VISUALLY CHECK TO BE SURE GARTER SPRING IS OVER FLARED END OF FEMALE FITTING.

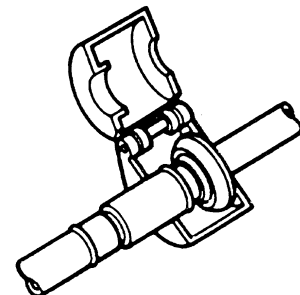

**4** REMOVE THE TOOL FROM THE DISCONNECTED SPRING LOCK COUPLING.