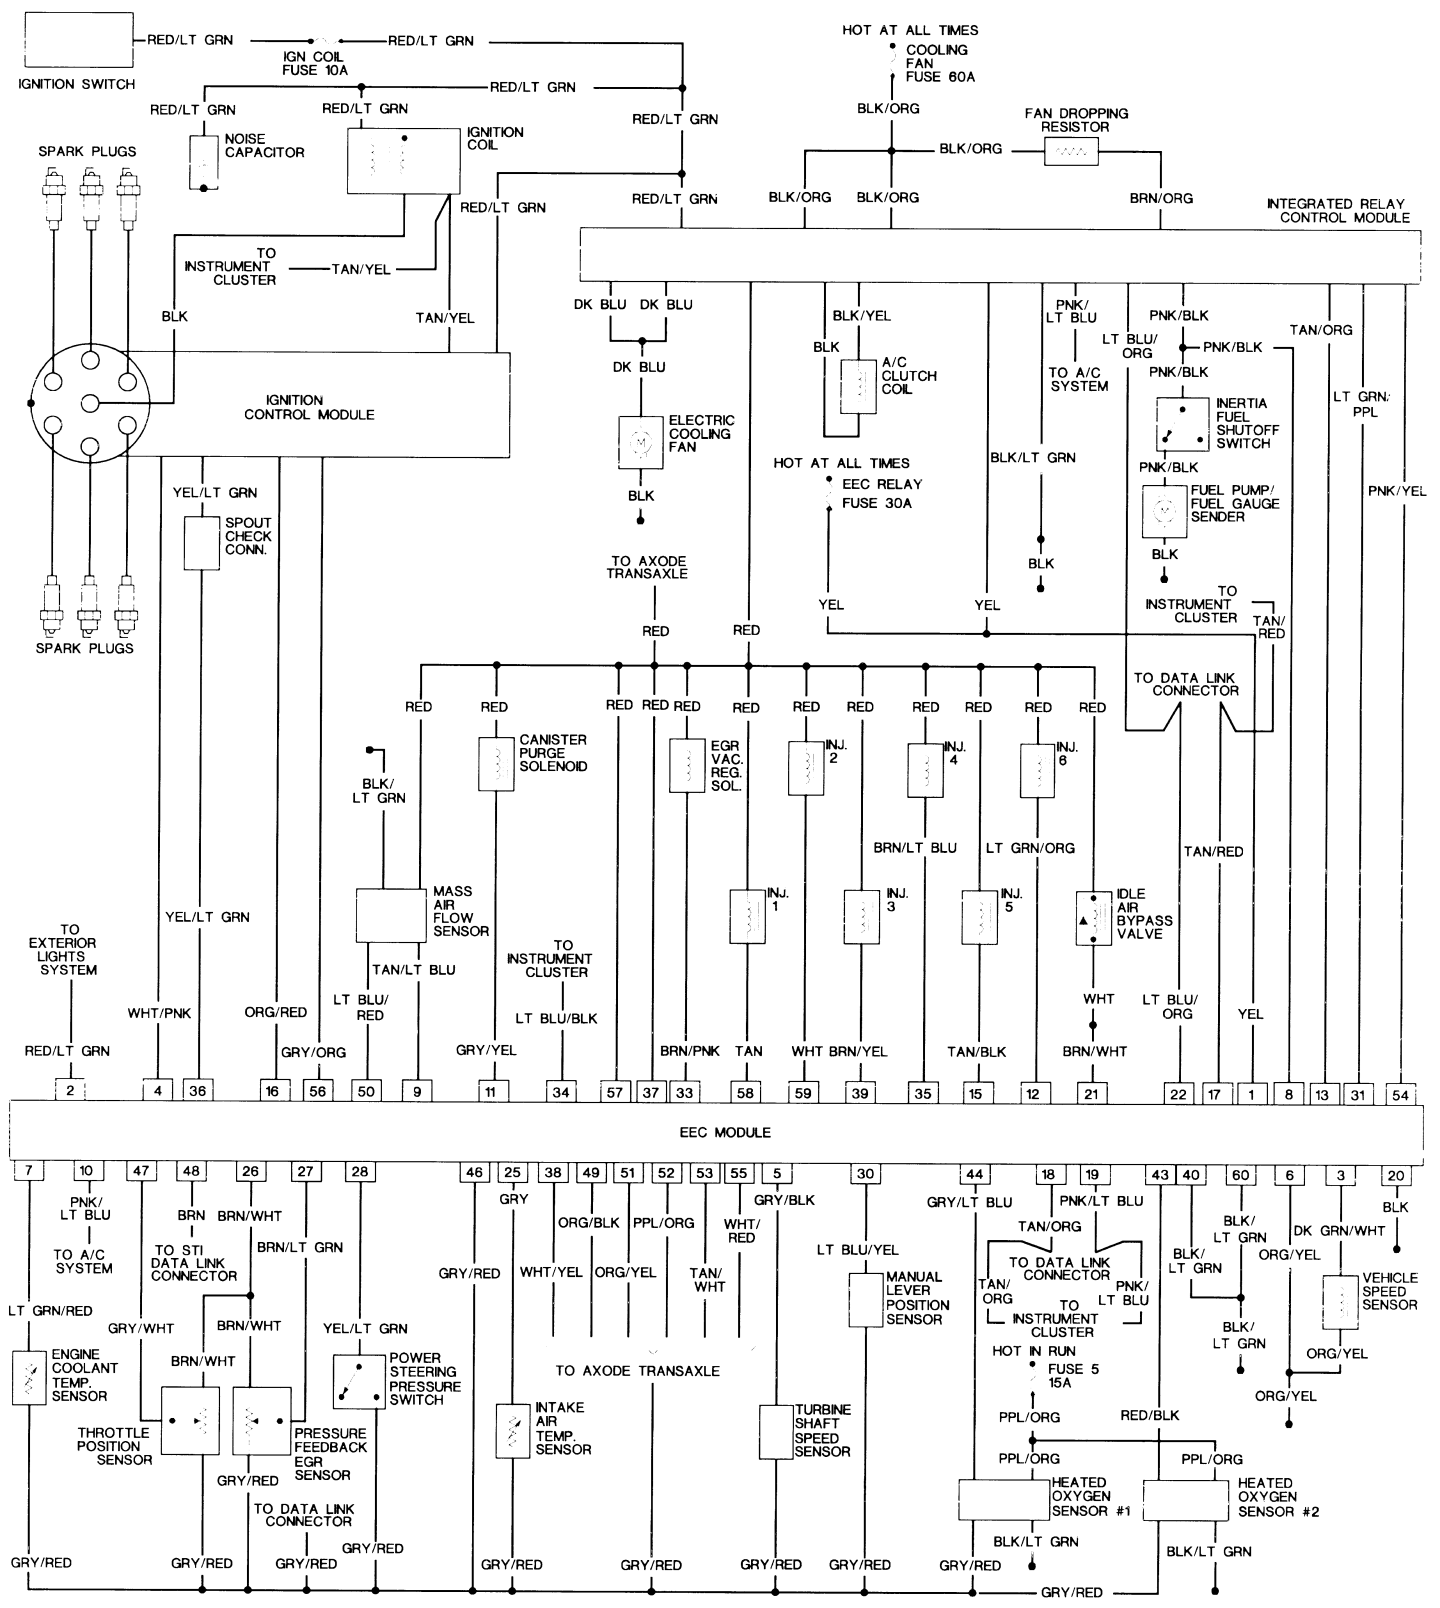
IGNITION SWITCH
RED/LT GRN
IGN COIL FUSE 10A
HOT AT ALL TIMES
COOLING FAN FUSE 60A
BLK/ORG
FAN DROPPING RESISTOR
SPARK PLUGS
NOISE CAPACITOR
IGNITION COIL
TO INSTRUMENT CLUSTER
TAN/YEL
BLK
INTEGRATED RELAY CONTROL MODULE
IGNITION CONTROL MODULE
DK BLU
ELECTRIC COOLING FAN
A/C CLUTCH COIL
TO A/C SYSTEM
PNK/LT BLU
PNK/BLK
LT BLU/ORG
INERTIA FUEL SHUTOFF SWITCH
FUEL PUMP/FUEL GAUGE SENDER
TAN/ORG
LT GRN/PPL
PNK/YEL
HOT AT ALL TIMES
EEC RELAY FUSE 30A
BLK/LT GRN
YEL/LT GRN
SPOUT CHECK CONN.
TO AXODE TRANSAXLE
TO INSTRUMENT CLUSTER
TAN/RED
TO DATA LINK CONNECTOR
CANISTER PURGE SOLENOID
EGR VAC. REG. SOL.
INJ. 1
INJ. 2
INJ. 3
INJ. 4
INJ. 5
INJ. 6
BLK/LT GRN
MASS AIR FLOW SENSOR
IDLE AIR BYPASS VALVE
BRN/LT BLU
LT GRN/ORG
TO EXTERIOR LIGHTS SYSTEM
WHT/PNK
ORG/RED
GRY/ORG
TAN/LT BLU
LT BLU/RED
GRY/YEL
LT BLU/BLK
BRN/PNK
TAN
WHT
BRN/YEL
TAN/BLK
BRN/WHT
LT BLU/ORG
YEL
EEC MODULE
PNK/LT BLU
TO A/C SYSTEM
BRN
BRN/WHT
TO STI DATA LINK CONNECTOR
BRN/LT GRN
GRY/RED
WHT/YEL
ORG/YEL
ORG/BLK
PPL/ORG
TAN/WHT
WHT/RED
GRY/BLK
LT BLU/YEL
MANUAL LEVER POSITION SENSOR
GRY/LT BLU
TAN/ORG
TO DATA LINK CONNECTOR
TAN/ORG
PNK/LT BLU
TO INSTRUMENT CLUSTER
HOT IN RUN FUSE 5 15A
BLK/LT GRN
ORG/YEL
DK GRN/WHT
VEHICLE SPEED SENSOR
BLK
LT GRN/RED
GRY/WHT
ENGINE COOLANT TEMP. SENSOR
THROTTLE POSITION SENSOR
PRESSURE FEEDBACK EGR SENSOR
POWER STEERING PRESSURE SWITCH
YEL/LT GRN
TO AXODE TRANSAXLE
INTAKE AIR TEMP. SENSOR
TURBINE SHAFT SPEED SENSOR
RED/BLK
PPL/ORG
HEATED OXYGEN SENSOR #1
HEATED OXYGEN SENSOR #2
TO DATA LINK CONNECTOR
GRY/RED