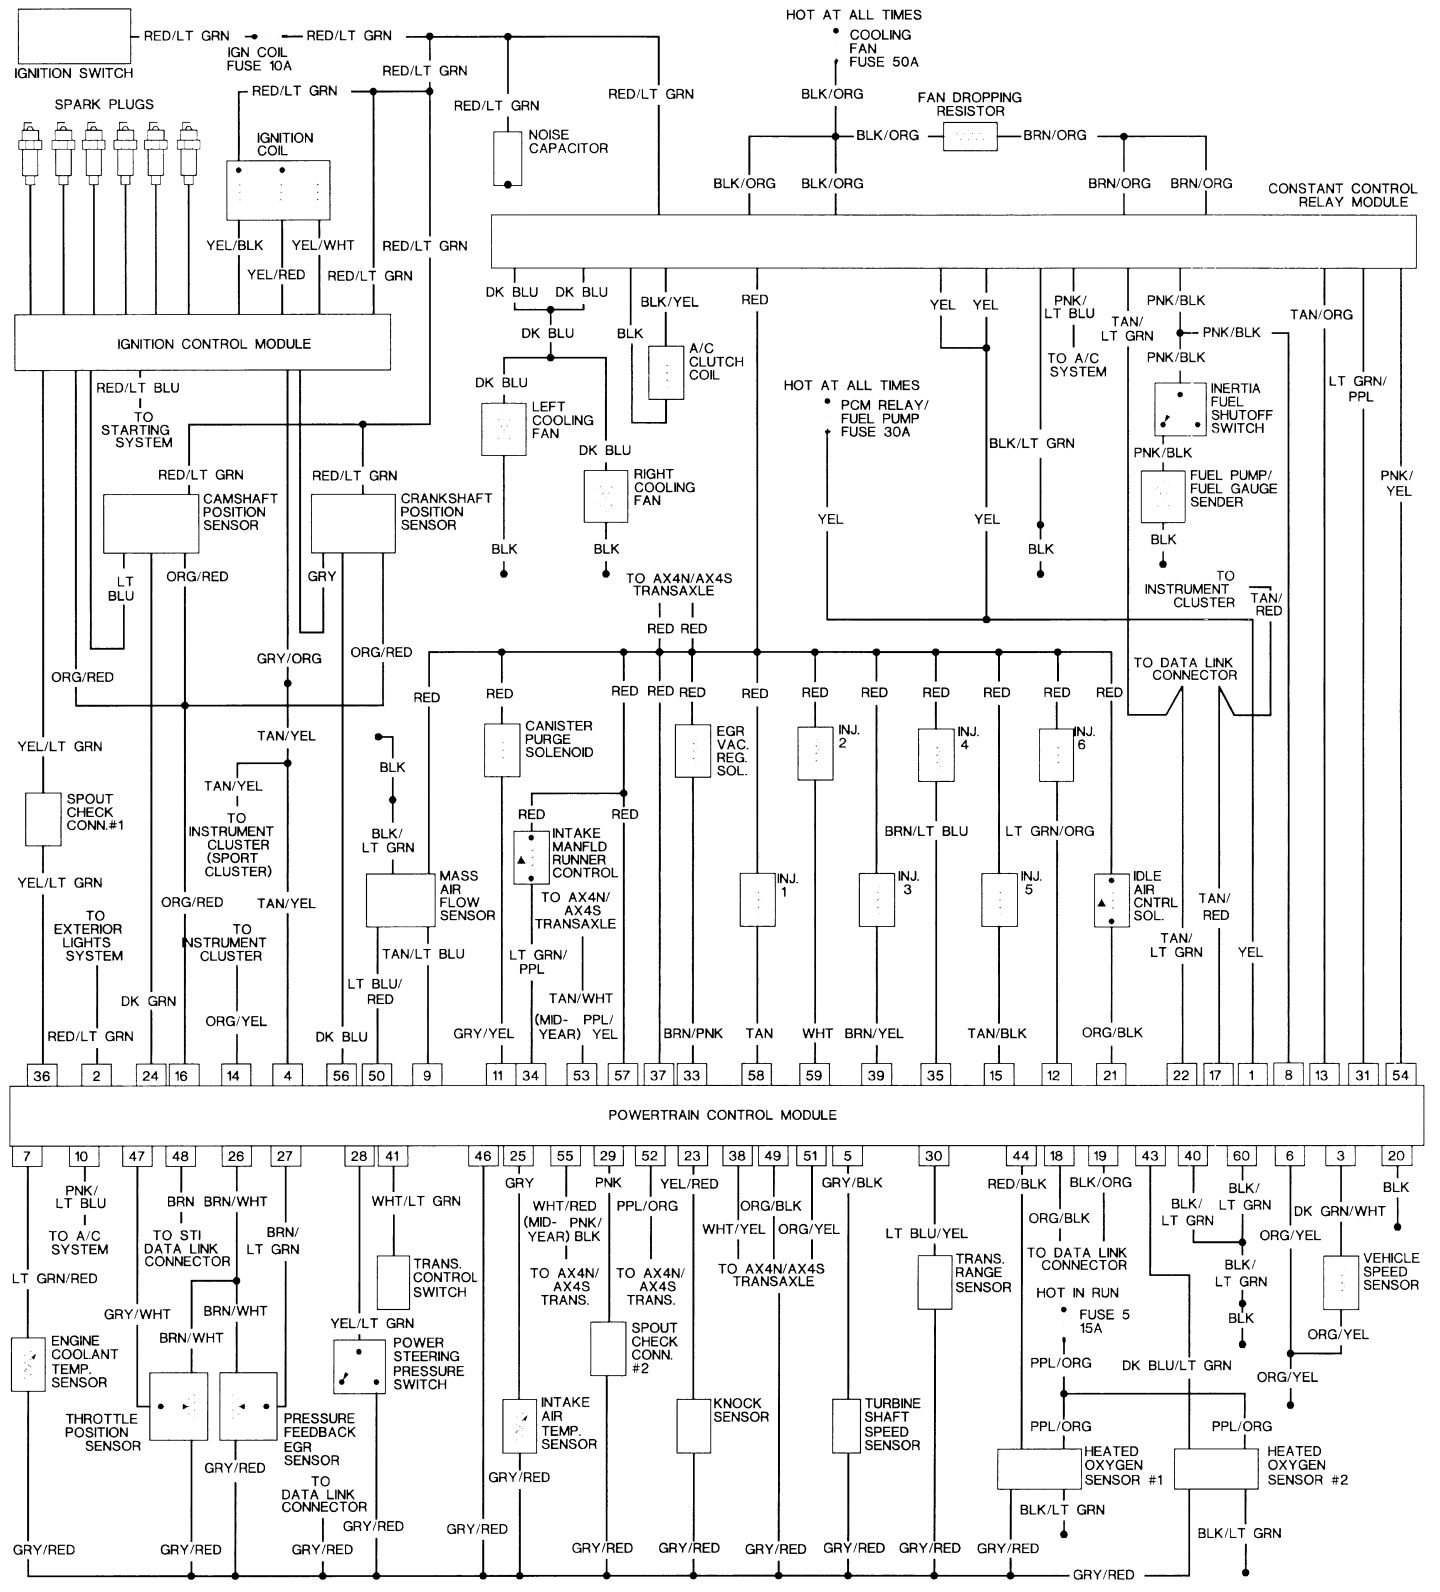
IGNITION SWITCH
RED/LT GRN
IGN COIL FUSE 10A
RED/LT GRN
RED/LT GRN
RED/LT GRN
RED/LT GRN
HOT AT ALL TIMES
COOLING FAN FUSE 50A
BLK/ORG
FAN DROPPING RESISTOR
BLK/ORG
BRN/ORG
BLK/ORG
BLK/ORG
BRN/ORG
BRN/ORG
CONSTANT CONTROL RELAY MODULE
SPARK PLUGS
IGNITION COIL
NOISE CAPACITOR
YEL/BLK
YEL/WHT
YEL/RED
RED/LT GRN
RED/LT GRN
IGNITION CONTROL MODULE
DK BLU
DK BLU
DK BLU
BLK/YEL
BLK
A/C CLUTCH COIL
RED
YEL
YEL
PNK/ LT BLU
TO A/C SYSTEM
TAN/ LT GRN
PNK/BLK
PNK/BLK
TAN/ORG
LT GRN/ PPL
PNK/ YEL
INERTIA FUEL SHUTOFF SWITCH
PNK/BLK
FUEL PUMP/ FUEL GAUGE SENDER
BLK
TO INSTRUMENT CLUSTER
TAN/ RED
DK BLU
LEFT COOLING FAN
DK BLU
RIGHT COOLING FAN
BLK
BLK
HOT AT ALL TIMES
PCM RELAY/ FUEL PUMP FUSE 30A
YEL
YEL
BLK/LT GRN
BLK
RED/LT BLU
TO STARTING SYSTEM
RED/LT GRN
CAMSHAFT POSITION SENSOR
LT BLU
ORG/RED
RED/LT GRN
CRANKSHAFT POSITION SENSOR
GRY
TO AX4N/AX4S TRANSAXLE
RED RED
TO DATA LINK CONNECTOR
ORG/RED
GRY/ORG
ORG/RED
RED
RED
RED
RED RED
RED
RED
RED
RED
RED
RED
RED
YEL/LT GRN
SPOUT CHECK CONN.#1
YEL/LT GRN
TAN/YEL
TAN/YEL
TO INSTRUMENT CLUSTER (SPORT CLUSTER)
BLK
BLK/ LT GRN
CANISTER PURGE SOLENOID
RED
RED
INTAKE MANFLD RUNNER CONTROL
TO AX4N/ AX4S TRANSAXLE
EGR VAC. REG. SOL.
INJ. 2
INJ. 4
INJ. 6
BRN/LT BLU
LT GRN/ORG
INJ. 1
INJ. 3
INJ. 5
IDLE AIR CNTRL SOL.
TAN/ RED
TAN/ LT GRN
YEL
ORG/RED
TAN/YEL
TO EXTERIOR LIGHTS SYSTEM
TO INSTRUMENT CLUSTER
MASS AIR FLOW SENSOR
LT GRN/ PPL
TAN/WHT
(MID- PPL/ YEAR) YEL
DK GRN
ORG/YEL
TAN/LT BLU
LT BLU/ RED
DK BLU
GRY/YEL
BRN/PNK
TAN
WHT
BRN/YEL
TAN/BLK
ORG/BLK
RED/LT GRN
36
2
24
16
14
4
56
50
9
11
34
53
57
37
33
58
59
39
35
15
12
21
22
17
1
8
13
31
54
POWERTRAIN CONTROL MODULE
7
10
47
48
26
27
28
41
46
25
55
29
52
23
38
49
51
5
30
44
18
19
43
40
60
6
3
20
PNK/ LT BLU
TO A/C SYSTEM
LT GRN/RED
BRN
TO STI DATA LINK CONNECTOR
BRN/WHT
BRN/ LT GRN
WHT/LT GRN
TRANS. CONTROL SWITCH
GRY
WHT/RED (MID- YEAR) PNK/ BLK
TO AX4N/ AX4S TRANS.
PNK
PPL/ORG
TO AX4N/ AX4S TRANS.
YEL/RED
ORG/BLK
WHT/YEL
ORG/YEL
TO AX4N/AX4S TRANSAXLE
GRY/BLK
LT BLU/YEL
TRANS. RANGE SENSOR
RED/BLK
BLK/ORG
ORG/BLK
TO DATA LINK CONNECTOR
HOT IN RUN
FUSE 5 15A
BLK/ LT GRN
BLK/ LT GRN
BLK
BLK/ LT GRN
ORG/YEL
DK GRN/WHT
ORG/YEL
BLK
VEHICLE SPEED SENSOR
ORG/YEL
GRY/WHT
BRN/WHT
BRN/WHT
ENGINE COOLANT TEMP. SENSOR
YEL/LT GRN
POWER STEERING PRESSURE SWITCH
SPOUT CHECK CONN. #2
PPL/ORG
DK BLU/LT GRN
ORG/YEL
THROTTLE POSITION SENSOR
PRESSURE FEEDBACK EGR SENSOR
GRY/RED
TO DATA LINK CONNECTOR
INTAKE AIR TEMP. SENSOR
GRY/RED
KNOCK SENSOR
TURBINE SHAFT SPEED SENSOR
PPL/ORG
HEATED OXYGEN SENSOR #1
PPL/ORG
HEATED OXYGEN SENSOR #2
BLK/LT GRN
BLK/LT GRN
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED