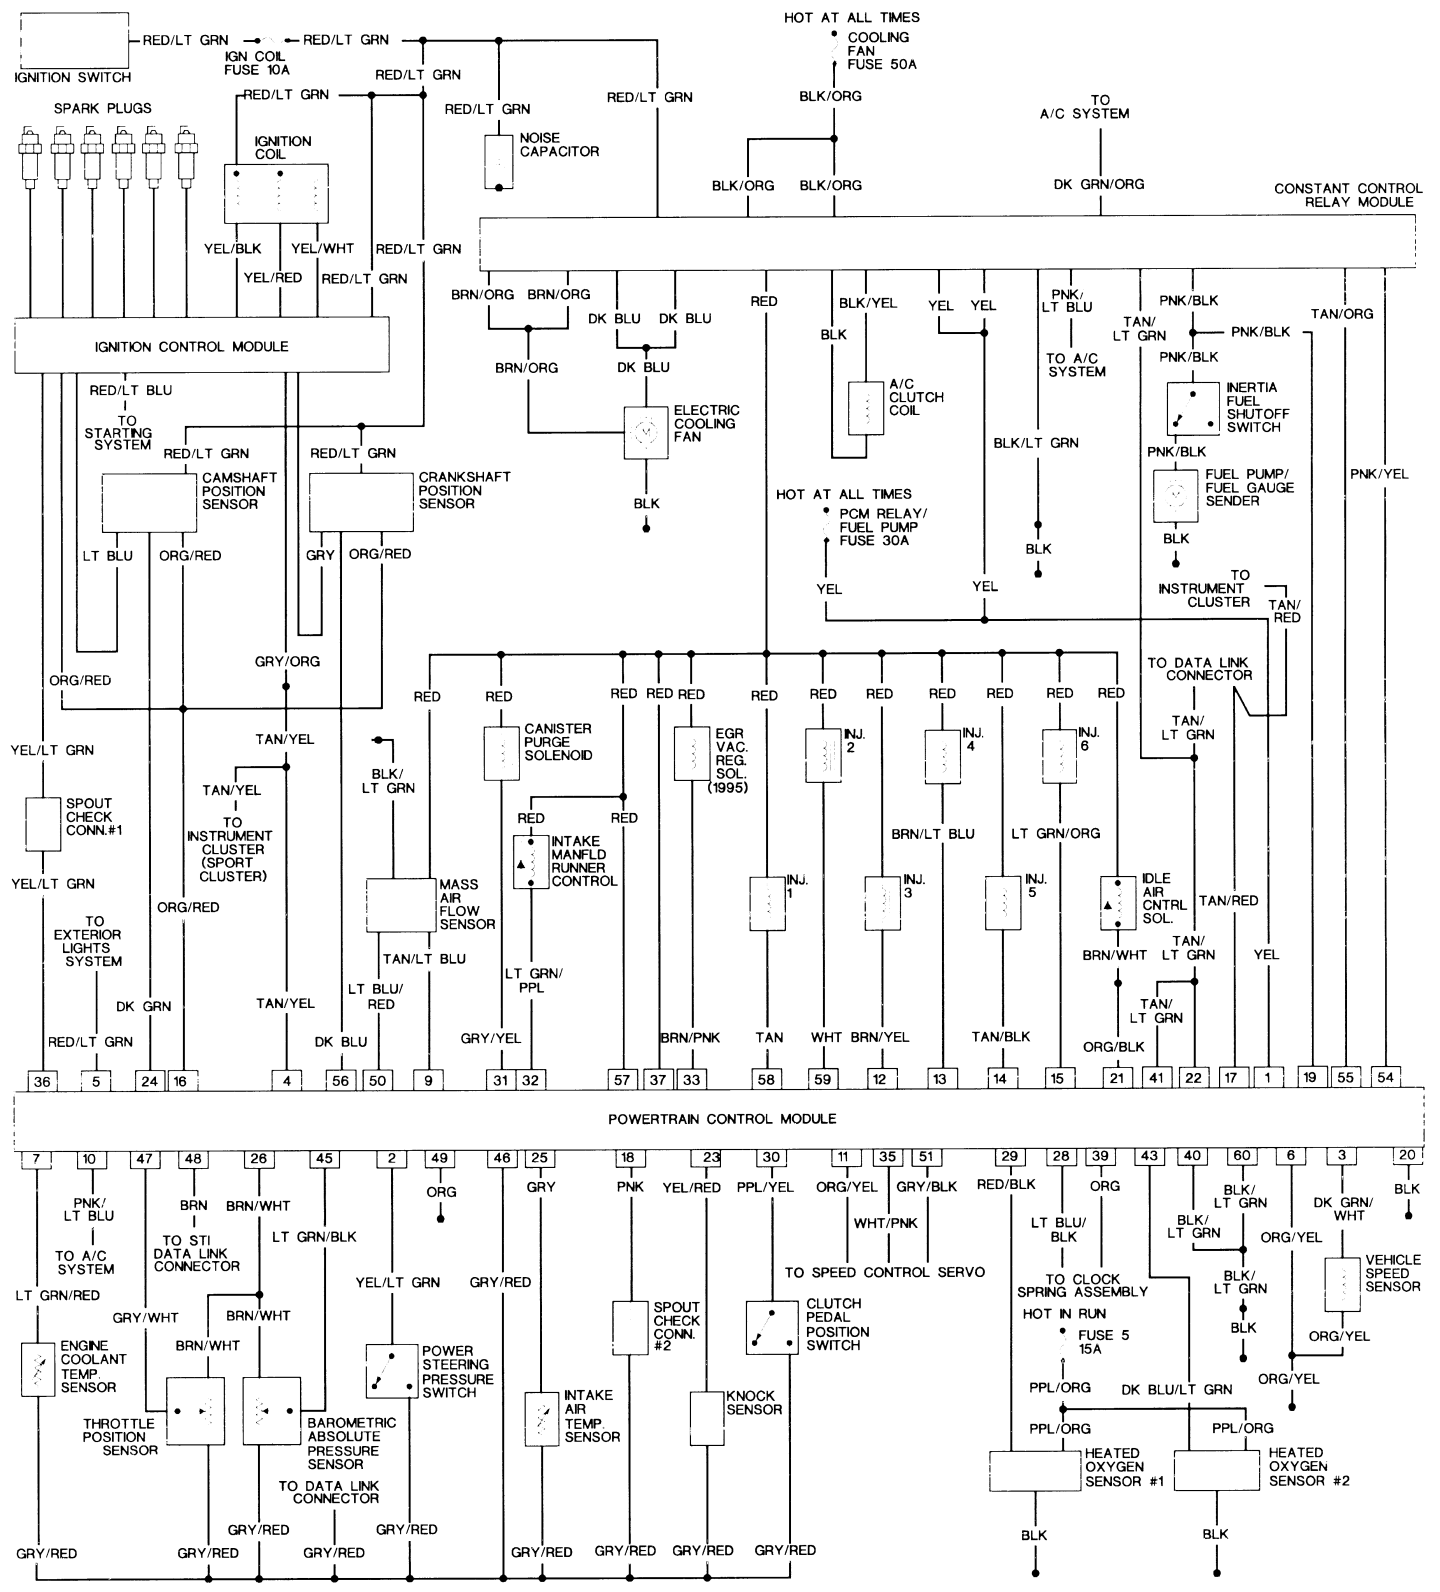
IGNITION SWITCH
RED/LT GRN
IGN COIL FUSE 10A
RED/LT GRN
RED/LT GRN
RED/LT GRN
RED/LT GRN
HOT AT ALL TIMES
COOLING FAN FUSE 50A
BLK/ORG
TO A/C SYSTEM
DK GRN/ORG
SPARK PLUGS
IGNITION COIL
NOISE CAPACITOR
BLK/ORG
BLK/ORG
CONSTANT CONTROL RELAY MODULE
YEL/BLK
YEL/WHT
YEL/RED
RED/LT GRN
RED/LT GRN
IGNITION CONTROL MODULE
BRN/ORG
BRN/ORG
BRN/ORG
DK BLU
DK BLU
DK BLU
ELECTRIC COOLING FAN
BLK
RED
BLK/YEL
BLK
A/C CLUTCH COIL
YEL
YEL
BLK/LT GRN
PNK/LT BLU
TO A/C SYSTEM
BLK
TAN/LT GRN
PNK/BLK
PNK/BLK
PNK/BLK
INERTIA FUEL SHUTOFF SWITCH
PNK/BLK
FUEL PUMP/FUEL GAUGE SENDER
BLK
TAN/ORG
PNK/YEL
RED/LT BLU
TO STARTING SYSTEM
RED/LT GRN
RED/LT GRN
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
LT BLU
ORG/RED
GRY
ORG/RED
HOT AT ALL TIMES
PCM RELAY/FUEL PUMP FUSE 30A
YEL
YEL
TO INSTRUMENT CLUSTER
TAN/RED
ORG/RED
GRY/ORG
TO DATA LINK CONNECTOR
TAN/LT GRN
RED
RED
RED
RED
RED
RED
RED
RED
RED
RED
RED
RED
CANISTER PURGE SOLENOID
EGR VAC. REG. SOL. (1995)
INJ. 2
INJ. 4
INJ. 6
YEL/LT GRN
TAN/YEL
BLK/LT GRN
SPOUT CHECK CONN.#1
TAN/YEL
TO INSTRUMENT CLUSTER (SPORT CLUSTER)
RED
RED
INTAKE MANFLD RUNNER CONTROL
BRN/LT BLU
LT GRN/ORG
INJ. 1
INJ. 3
INJ. 5
IDLE AIR CNTRL SOL.
YEL/LT GRN
ORG/RED
MASS AIR FLOW SENSOR
TAN/RED
TO EXTERIOR LIGHTS SYSTEM
TAN/LT BLU
BRN/WHT
TAN/LT GRN
DK GRN
TAN/YEL
LT BLU/RED
LT GRN/PPL
TAN/LT GRN
YEL
RED/LT GRN
DK BLU
GRY/YEL
BRN/PNK
TAN
WHT
BRN/YEL
TAN/BLK
ORG/BLK
36
5
24
16
4
56
50
9
31
32
57
37
33
58
59
12
13
14
15
21
41
22
17
1
19
55
54
POWERTRAIN CONTROL MODULE
7
10
47
48
26
45
2
49
46
25
18
23
30
11
35
51
29
28
39
43
40
60
6
3
20
PNK/LT BLU
TO A/C SYSTEM
BRN
TO STI DATA LINK CONNECTOR
BRN/WHT
LT GRN/BLK
ORG
YEL/LT GRN
GRY/RED
GRY
PNK
YEL/RED
PPL/YEL
ORG/YEL
GRY/BLK
WHT/PNK
TO SPEED CONTROL SERVO
RED/BLK
LT BLU/BLK
TO CLOCK SPRING ASSEMBLY
ORG
BLK/LT GRN
BLK/LT GRN
DK GRN/WHT
BLK
ORG/YEL
VEHICLE SPEED SENSOR
LT GRN/RED
GRY/WHT
BRN/WHT
BRN/WHT
ENGINE COOLANT TEMP. SENSOR
THROTTLE POSITION SENSOR
BAROMETRIC ABSOLUTE PRESSURE SENSOR
TO DATA LINK CONNECTOR
POWER STEERING PRESSURE SWITCH
INTAKE AIR TEMP. SENSOR
SPOUT CHECK CONN. #2
KNOCK SENSOR
CLUTCH PEDAL POSITION SWITCH
HOT IN RUN
FUSE 5 15A
PPL/ORG
DK BLU/LT GRN
ORG/YEL
ORG/YEL
PPL/ORG
PPL/ORG
HEATED OXYGEN SENSOR #1
HEATED OXYGEN SENSOR #2
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
GRY/RED
BLK
BLK